


# USER MANUAL



*Northside Sales, Co.*  
Safety & Industrial Products  
800-467-9005

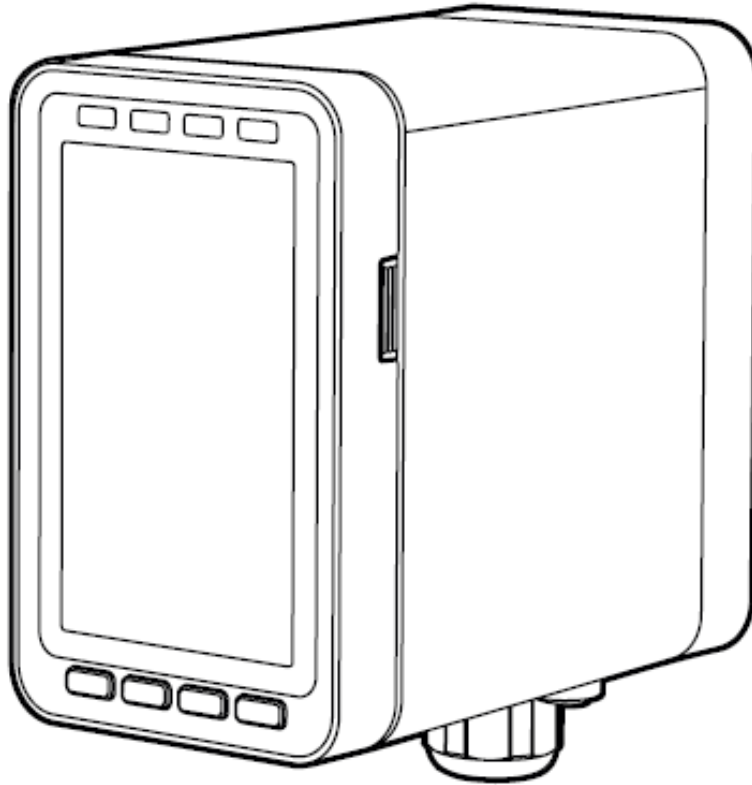

## MIDAS-M MULTIGAS TRANSMITTER

Fixed Single Point Extracted

Multi Gas Transmitter

**Honeywell**

3016M5001 Rev. C  
ECO 00210052



# TOC

---

<b>Introduction .....</b>	<b>7</b>
<b>About Us .....</b>	<b>7</b>
<b>Product Description .....</b>	<b>7</b>
<b>Overview .....</b>	<b>8</b>
<b>User Interface .....</b>	<b>9</b>
<b>Default Configuration .....</b>	<b>10</b>
<b>Installation .....</b>	<b>11</b>
<b>Mount the Transmitter Device .....</b>	<b>11</b>
<b>Mount the Relay Module .....</b>	<b>15</b>
<b>Sample and Exhausting Tubing Calculations .....</b>	<b>17</b>
Prepare Tubing .....	18
<b>In-Line Filters .....</b>	<b>18</b>
<b>Local Detector Option .....</b>	<b>18</b>
<b>Electrical Installation .....</b>	<b>19</b>
<b>Electrical Connection .....</b>	<b>23</b>
<b>Wiring The Relay Module .....</b>	<b>26</b>
<b>Mount The Sensor Cartridge .....</b>	<b>28</b>
<b>Device &amp; Web Operations .....</b>	<b>29</b>
<b>Comissioning .....</b>	<b>29</b>
<b>Monitoring Mode .....</b>	<b>30</b>
<b>Review Information .....</b>	<b>32</b>
<b>Setup Operations .....</b>	<b>34</b>

---

<b>Test Mode .....</b>	<b>36</b>
<b>Calibration Mode .....</b>	<b>38</b>
<b>Calibration &amp; Bump Test .....</b>	<b>39</b>
Bump Test .....	40
<b>Internal Web Server .....</b>	<b>42</b>
Physical Network Components .....	42
Internet Settings .....	42
Running the Web Server .....	44
<b>Line Integrity Test Option .....</b>	<b>71</b>
Pneumatic Overview .....	72
Quantitative Performance .....	73
Software Overview .....	73
LIT Related Events .....	74
LIT Initial Set-Up .....	75
<b>Maintenance .....</b>	<b>77</b>
<b>System Leak Check .....</b>	<b>78</b>
<b>Additional Information .....</b>	<b>81</b>
<b>EU Directive 2012/19/EU: Waste Electrical and Electronic Equipment (WEEE) .....</b>	<b>81</b>
<b>Troubleshooting and Fault Diagnosis .....</b>	<b>82</b>
<b>Specifications .....</b>	<b>86</b>
<b>Ordering .....</b>	<b>89</b>
Transmitter .....	89
Cartridge .....	90
Smart Sensor .....	91
Accessories .....	91

---

<b>Gas Table .....</b>	<b>94</b>
<b>Combination Index .....</b>	<b>96</b>
<b>Reflex .....</b>	<b>98</b>
<b>A Modbus/TCP Interface .....</b>	<b>99</b>
<b>Security .....</b>	<b>113</b>
Modbus TCP .....	113
DOS attack .....	113
<b>Install Web Server Certificate in Google Chrome .....</b>	<b>115</b>
<b>Install Web Server Certificate in MS Browsers .....</b>	<b>117</b>
<b>Warranty .....</b>	<b>119</b>
Sensor Cartridge Warranty .....	120
<b>Contact Us .....</b>	<b>121</b>
<b>Glossary .....</b>	<b>125</b>



# 1 Introduction

Learn what you need to know about the Honeywell Midas®-M Gas Detector before operating.

## About Us

### **Honeywell Analytics: the global leader in gas detection**

While you build a better world, we're building smarter safety.

For nearly 50 years, Honeywell Analytics has been protecting people who put their lives on the line every day. It takes a special level of drive and dedication to work in hostile environments, and we believe your workers deserve the same kind of commitment from us when it comes to securing their health and safety.

Right from the start, our founders were determined to find better ways to design, build and manufacture reliable gas detection solutions. Through advanced technology and pure industry know-how, Honeywell Analytics continues to improve and evolve our products. Today, we're proud to partner with customers worldwide who share our vision of vigilance and rely on us to help them protect what matters most.

From custom-designed solutions to unmatched training and support, Honeywell Analytics is simply the smartest choice when you demand the best in safety.

## Product Description

The Honeywell Midas®-M is a Fixed Extractive Single Point with 4-in-1 Multi Gas Detector that draws a sample locally or from a remote point to a sensor cartridge that is located inside the detector's chassis. A wide range of toxic, flammable and oxygen gas sensor cartridges are available that enable detection of gases used or generated in the Semiconductor and other manufacturing industries.


Midas-M is shipped from the factory with the security function disabled. We strongly recommend enabling this function for safe use of the detector. To enable it, select **Set up > Security** and type an 8 character password.

Midas-M is wall mounted and displays gas concentration, alarm, fault and status information via its backlit LCD and LEDs. A simple to use 4-button keypad located under the display provides the facility to set-up, review, operate and make changes to the detector's configuration.

Midas-M has flexible power and communications capabilities built in as standard. These include 3 on board relays, 0-21 mA analog output, Modbus/TCP outputs for signal and service connectivity as well as Power over Ethernet (PoE) connection that enables a single Ethernet connection to be made for all power, control and communication requirements.

## Overview


The Midas-M gas detector comprises of 4 parts: the main module, the mounting bracket assembly, the sensor cartridge and the pump module.

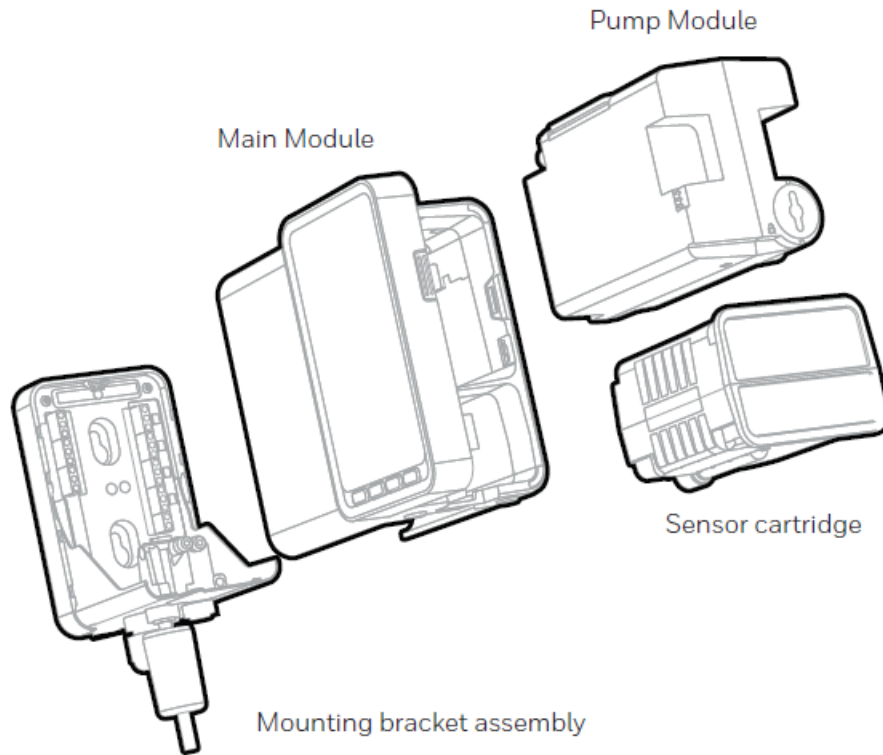



# User Interface

Detector's User Interface overview.

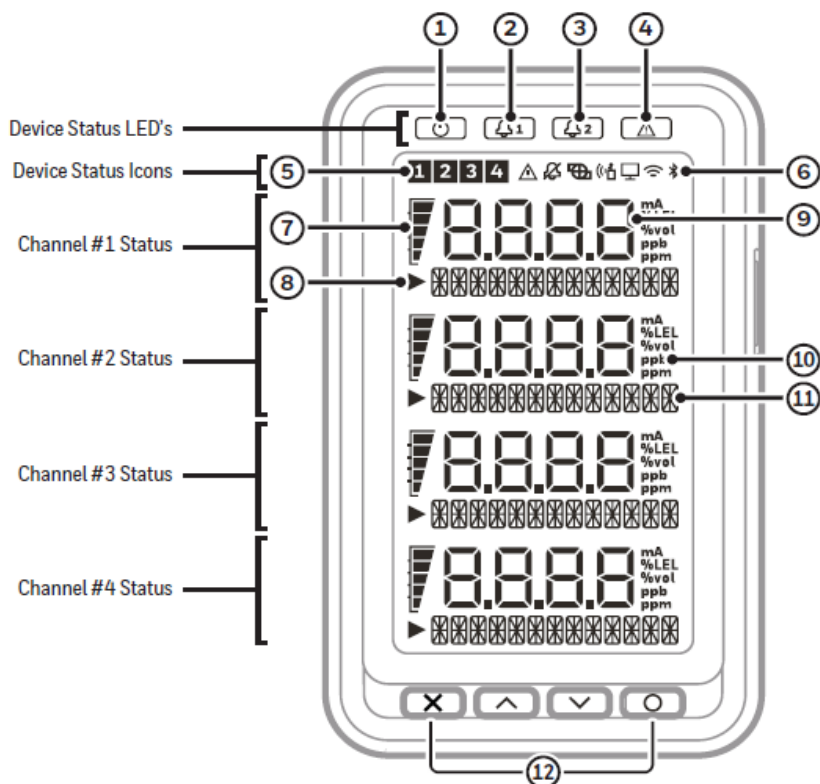

- |                                                                                                                                                                                                                                                       |                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① Power LED                                                                                                                                                                                                                                           | ⑦ Bar graph for gas concentration display                                                                                                                    |
| ② Alarm 1 LED                                                                                                                                                                                                                                         | ⑧ Entry indicator for menu operation                                                                                                                         |
| ③ Alarm 2 LED                                                                                                                                                                                                                                         | ⑨ Gas concentration                                                                                                                                          |
| ④ Fault LED                                                                                                                                                                                                                                           | ⑩ Unit                                                                                                                                                       |
| ⑤ Selected channel number indicator for menu operation                                                                                                                                                                                                | ⑪ Gas name, menu, fault message                                                                                                                              |
| ⑥ Device status icons                                                                                                                                                                                                                                 | ⑫ Buttons                                                                                                                                                    |
| <div style="display: flex; justify-content: space-between;"> <div> <p>📶 Wireless Connected</p> <p>📶 Bluetooth Connected</p> <p>🔧 Internal pump running</p> </div> <div> <p>⚠️ Fault</p> <p>🚫 Inhibit</p> <p>🔧 Bump test in progress</p> </div> </div> | <div style="display: flex; flex-direction: column; align-items: center;"> <div>✕ Cancel</div> <div>○ Accept</div> <div>⬆️ Up</div> <div>⬇️ Down</div> </div> |

# Default Configuration

The Midas-M gas detector is factory-configured.

NOTE: Oxygen levels are 20.9% v/v in a normal atmosphere, equivalent to 17.3 mA. Use caution when integrating an oxygen Midas-M unit using the 4-20 mA output since fault, inhibit, and no power conditions are below 4 mA and, by default, an oxygen depletion alarm is triggered on a falling alarm (default 19.5% v/v). In that case, Honeywell Analytics recommends one of the following:

- Use Modbus TCP digital communications
- Use discrete relay inputs instead of a 4-20 mA signal to trigger gas alarms
- Program the control system of the 4-20 mA input with logic and a delay (e.g., 1 second) before triggering an alarm to determine if the 4-20 mA output is at one of the 0-4 mA conditions described above.

Contact Honeywell Analytics for further information.

Factory Default Configuration

	Toxic Gas	flammable gas <sup>1</sup>	oxygen
Full Scale (FS)	Typically 4 x Threshold Limit Value (TLV)	100% Lower Explosive Limit (LEL)	25% Volume (v/v)
Alarm 1 (Relay 1)	1/2 TLV	10% LEL	23.5% v/v (Rising)
	Normally de-energized, energizes on alarm.		
Alarm 2 (Relay 2)	TLV	20% LEL	19.5% v/v (Falling)
	Normally de-energized, energizes on alarm.		
Fault (Relay 3)	Normally energizes, de-energized on fault.		
Latching	Latching. Alarm and fault relays DO NOT automatically reset when reading falls below alarm thresholds. Relays MUST be manually reset.		
Passcode	No Passcode set.		
Address	169.254.60.47 subnet mask 255.255.255.0		
Current source with:			
1.0 mA	Fault		
2.0 mA	Inhibit		
3.0 mA	Maintenance Fault		
4.0 to 20.0 mA	Gas reading (normal operation)		
21.0 mA	Over range		
<sup>1</sup> Not yet released			

# 2 Installation

For ease of installation Midas-M has been designed to allow the installation of the mounting bracket assembly and main module separately from the other parts of the detector. The detector location and hard wiring can therefore be completed before fitting the detector's main module and sensor cartridge.

## WARNING


**Midas-M is designed for installation and use in indoor safe area non-explosive atmospheres. Installation must be in accordance with the recognized standards of the appropriate authority in the country concerned. Prior to carrying out any installation ensure local regulations and site procedures are followed.**

**Ensure the connection of all modules (e.g pump, and cartridge module) with the main module. Otherwise, Midas-M can have flow leakage or malfunction.**

## Mount the Transmitter Device

The Midas-M gas detector has an integral mounting bracket assembly that is easily mounted to a suitable vertical surface such as a wall, tool housing, mounting plate on a pole etc.


### Midas-M outline dimensions

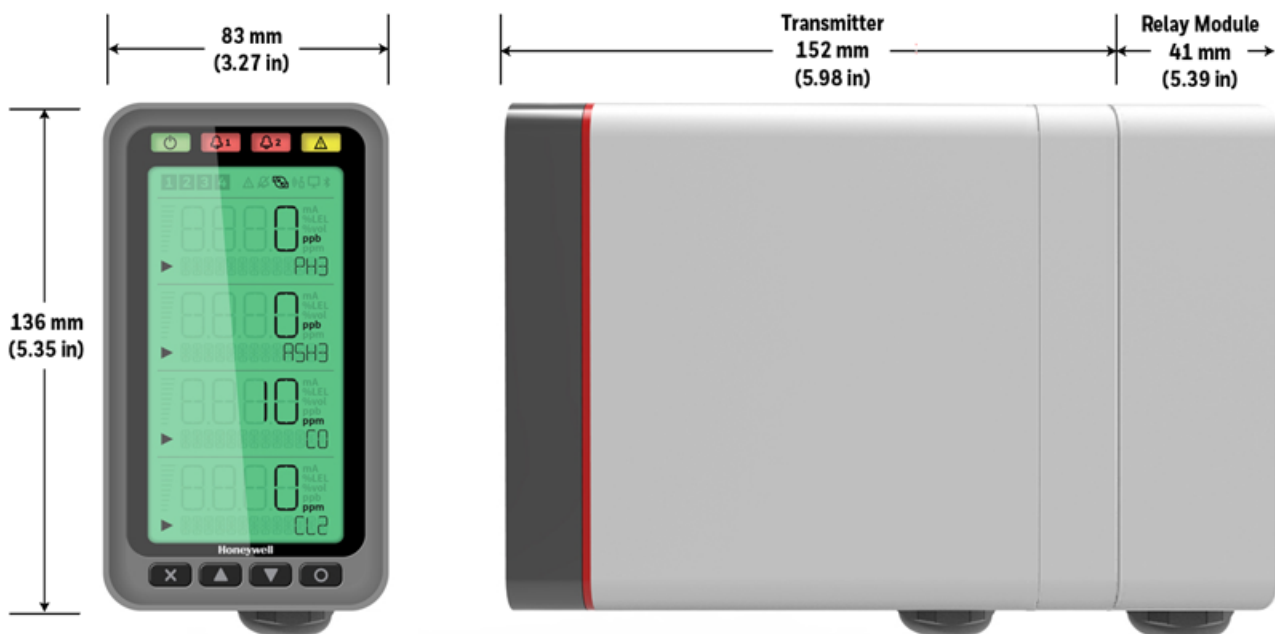


#### NOTE


Notice the space required to install the instrument, open the door, push in/pull out modules, and tubing.

### Mounting procedure

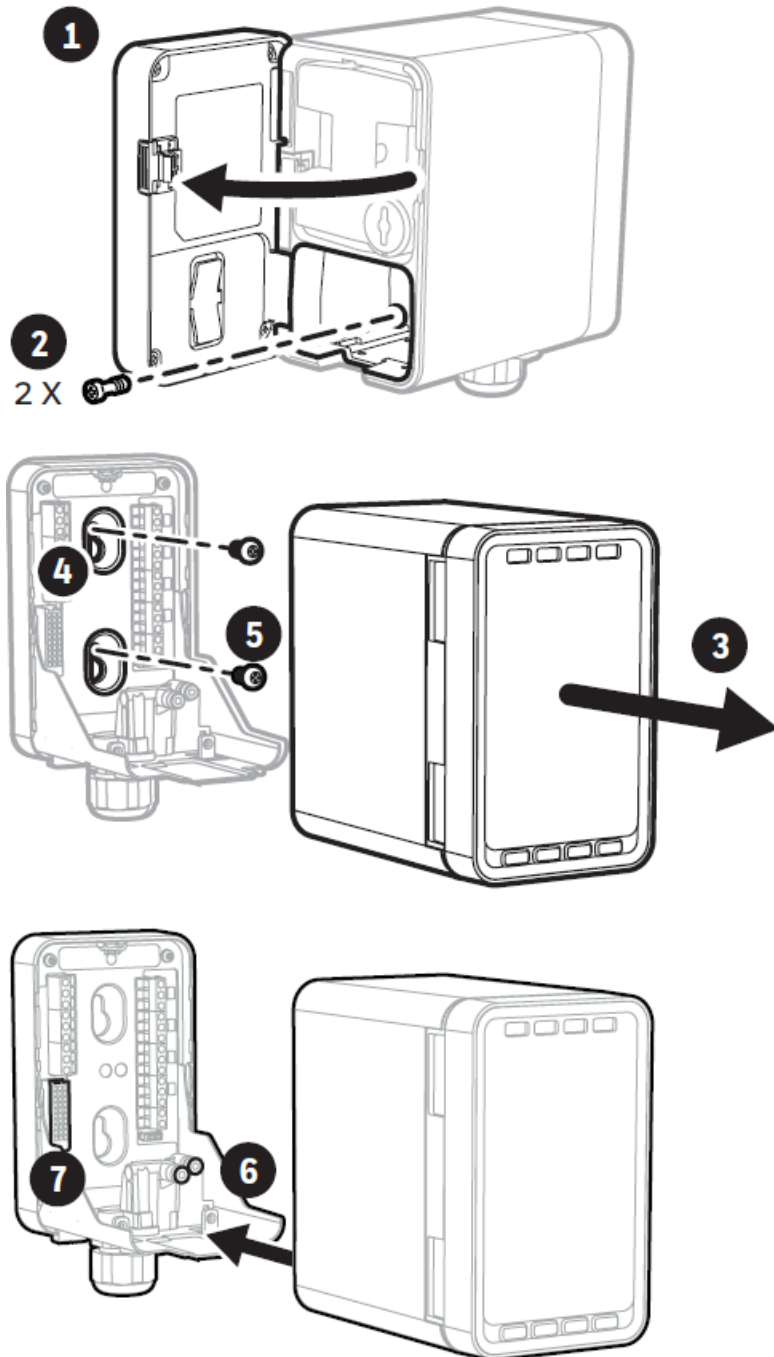

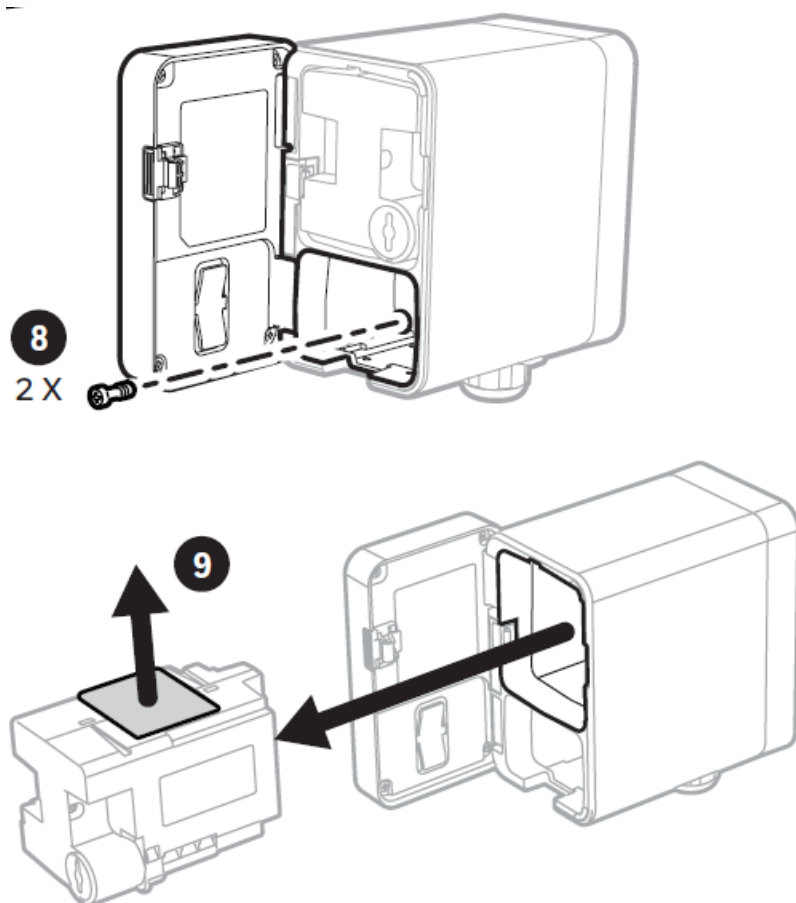

1. the door.
2. Un-tight the two screws.
3. Carefully pull the main module forward.
4. Drill two holes 2.2 in (55.9 mm) Use 2 x M4 Screws or equivalent for mounting (head size 7-11 mm).

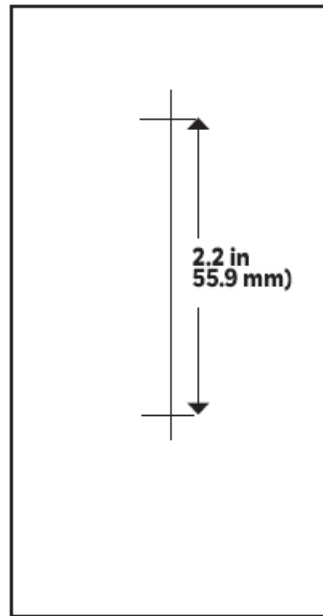

#### NOTE


This drill template is not to scale.

5.
  - a. Partially screw the fixings into the mounting surface.
  - b. Place the mounting bracket assembly over the screws, so they pass through the mounting holes and then slide down to locate in the slots.
  - c. Tighten the screws to secure the mounting bracket assembly.
6.
  - a. Align the rounded corner at the lower of the main module with the similar rounded corner at the bottom of the mounting bracket assembly
  - b. Slide the main module backward while pushing the main module up after connecting with a mounting bracket so that the PCB connector and tubes engage simultaneously.
7. Ensure the PCB, connector, and tubes are fully engaged by firmly pushing the main module horizontally backward on the mounting bracket assembly. **DO NOT PUSH ON THE LCD AS THIS MAY DAMAGE IT.**
8.
  - a. Align the two fixing screws located at the bottom of the module with the screw threads on the mounting bracket assembly.
  - b. Tighten the screws to secure the module to the mounting bracket assembly.
9. Remove the internal packing card securing the pump. Failure to remove this packing will result in damage to the Midas-M detector.


# Mount the Relay Module

The Relay Module has an integral mounting bracket assembly that is easily mounted to a suitable vertical surface such as a wall, tool housing, mounting plate on a pole etc.

1. Pull out the four screws and remove the plate cover.
2.
  - a. Partially screw the fixings into the mounting surface.
  - b. Place the Relay module over the screws, so they pass through the holes to locate in the slots.
  - c. Tighten the screws to fix the Relay Module to the surface.
3. Connect the wire through the cable gland to the terminal block.
4. Place the plate cover in position and screw the four screws you removed in Step 1.

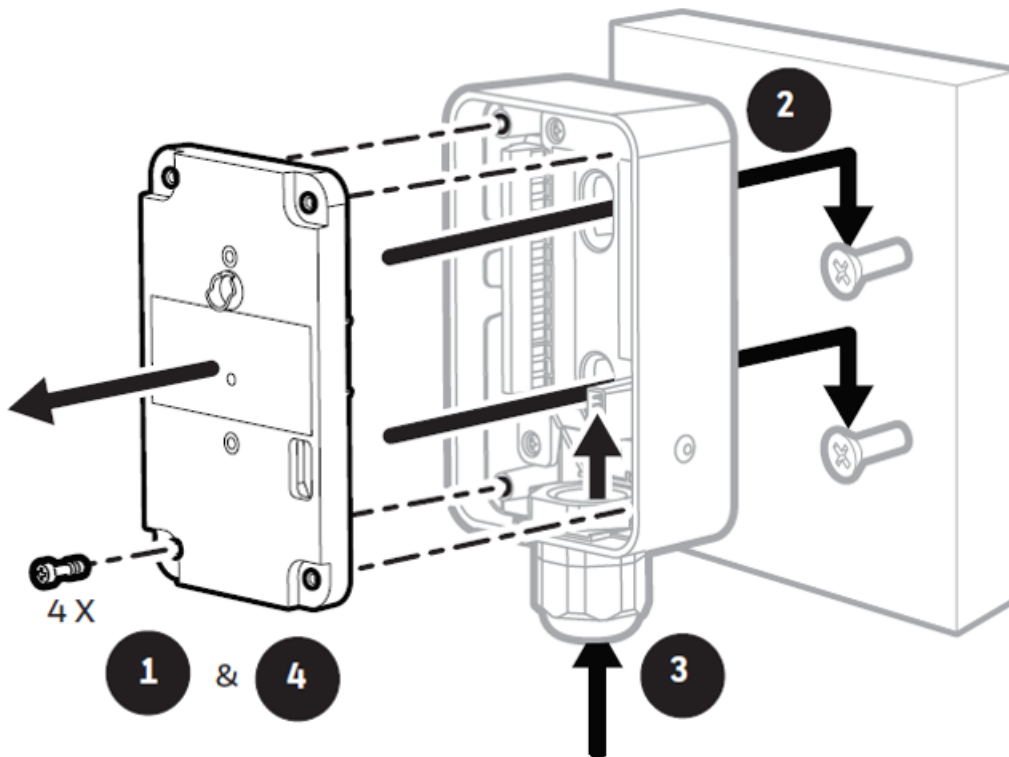

5. Push the mounting bracket assembly horizontally and engage the Relay Module connector.
6.
  - a. Align the screw holes and the slot-boundaries, and tight the machine screws (3016D0355) provided in packaging.
  - b. Connect the mounting bracket assembly to the Relay Module.

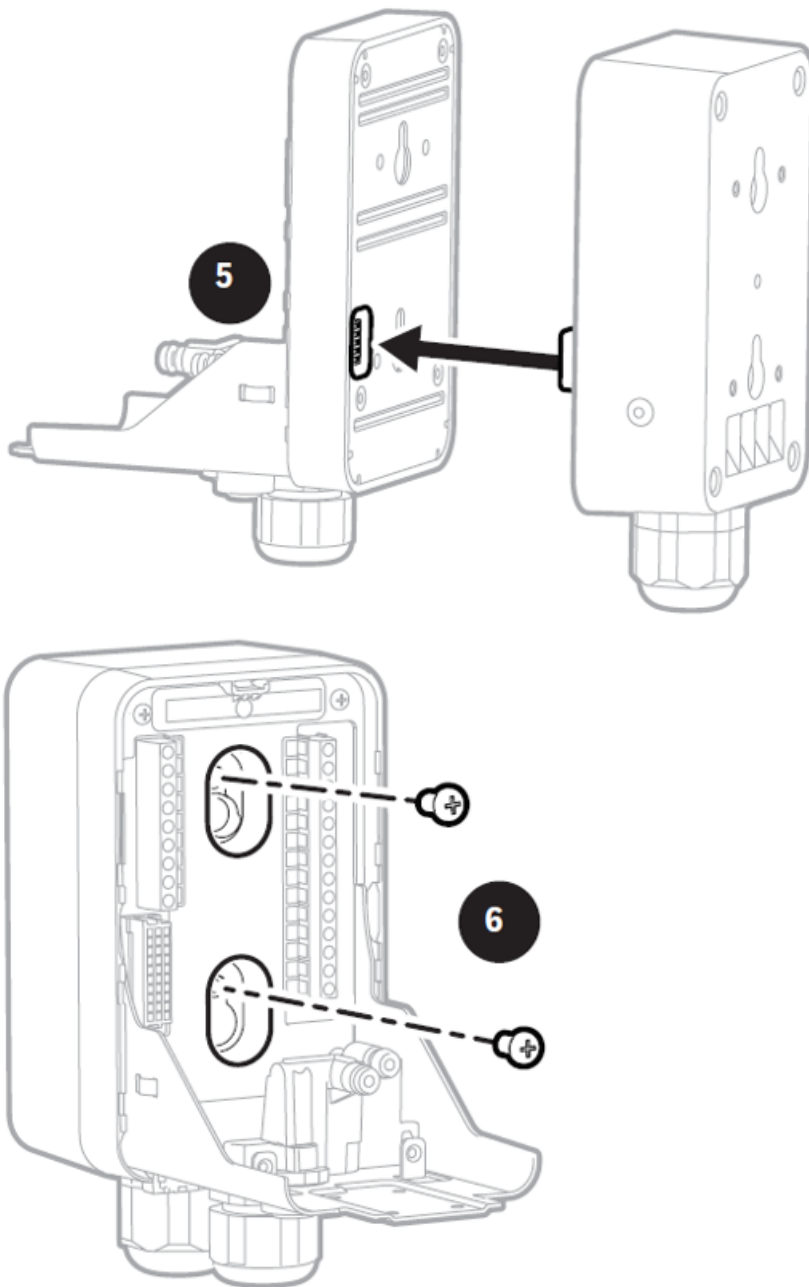



# Sample and Exhausting Tubing Calculations

Description of flow rate, and tubing vacuum at the inlet and exhaust points,

## Inlet sample specifications

Description	Maximum
Tubing Length, m (ft)	30 (100)
Sample Point Vacuum	-25.4 cm H <sub>2</sub> O (-10 in H <sub>2</sub> O)
Sample Point Vacuum with LIT Check Valve	-12.7 cm H <sub>2</sub> O (-5 in H <sub>2</sub> O)
Transport Time (sec), ID 1/8" <sup>1</sup>	25
Transport Time (sec), ID 3/16"	53
Flow rate, cc/min.	600 (Flow is constant) <sup>2</sup>
Tubing OD, mm (in)	6.35 (0.25)
Tubing ID, mm (in)	3.18 (0.125)

<sup>1</sup> Honeywell Analytics recommends thick-wall tubing (1/8" ID) for best speed of response. Due to its lower surface area, thick-wall tubing may require less conditioning than thin-wall tubing.

<sup>2</sup> The flow rate is electronically maintained at approximately 600 cc/min and may vary within acceptable tolerances.

Tubing lengths vary among gases. See the Gas Chart for recommended lengths.

### NOTE

Honeywell Analytics recommends the use of Teflon FEP (Fluorinated Ethylene Polymer) tubing to assure proper sample transport. The properties of Teflon FEP make it the best choice for transporting sample toxic gases to instruments when compared with the properties of other similar tubing materials.

## Outlet sample specifications

description	maximum
Tubing Length, m (ft)	30 (100)
Sample Point Vacuum	-20.3 cm H <sub>2</sub> O (-8 in H <sub>2</sub> O)

description	maximum
Sample Point Vacuum with LIT Check Valve	-10.16 cm H <sub>2</sub> O (-4 in H <sub>2</sub> O)
Flow rate, cc/min	600 (Flow is constant)
Tubing OD, mm (in)	6.35 (0.25)
Tubing ID, mm (in)	4.76 (0.188)

## Prepare Tubing

1. Cut the tube squarely and remove any burrs.
2. Mark from end of tube the length of insertion. The insertion length of Midas-M from the end of tube is 15.5 mm.

### NOTE

When inserting the tube into the inlet/outlet port of the Midas-M, make sure that it is inserted up to the marked position.

## In-Line Filters

External filters must be used to protect the tubing from contamination. Use particulate filter part number 780248 for normal gases and 1830-0055 or 1991-0147 for corrosive gases. Replace the filter every 3 months. Refer to the Gases Table for specific gases.


## Local Detector Option

The Midas-M gas detector can also be used to monitor for gas at the location of the detector. To do this, an inline filter is simply connected to the sensor cartridge gas inlet port. The external dust filter part number is 780248 for normal gases and 1830-0055 or 1991-0147 for corrosive gases. The area around the detector is then being monitored as opposed to a sample being drawn from a remote location.

# Electrical Installation

Access for the electrical wires to the terminal module is made via the PG16 cable gland located at the bottom of the mounting bracket assembly. The cable gland can be removed and replaced with a suitable conduit fitting if required.

Typical wire routing

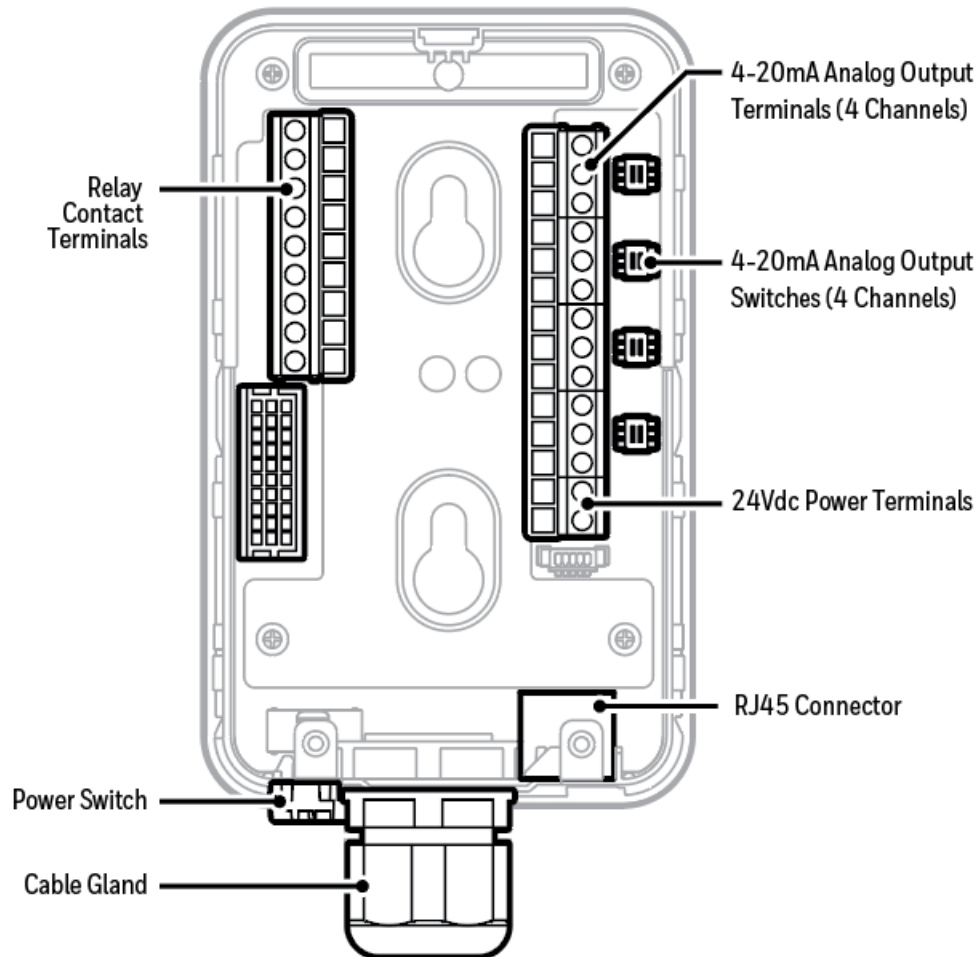

The terminals used are suitable for conductors of 24 to 14 AWG (0.5 to 1.8mm Dia.). We recommend using the 16 AWG (1.5 mm Dia.) conductors.

If Power over Ethernet (PoE) is used to power the device, then 24 VDC power must not also be connected to the device, (or conversely, if 24 VDC is used to power the Midas-M, then electrical power via the Ethernet port must not be applied). Failure to observe this requirement may cause damage to the gas detection system and will not be covered by the standard warranty.

When connecting the wires ensure that the power switch is in the off position.

## NOTE

**Earthing Requirements:** If the Midas-M unit's metal chassis is not connected directly to a metal surface for earthing purposes, an additional earth wire will be required. Connect a


wire via the PG16 gland to the dedicated earth tag (screw terminal) located on the bottom bracket and connect the other end of the wire to a dedicated external earthing point. If Power over Ethernet (PoE) power supply is being used, shielded CAT5 Ethernet cable is recommended. Please ensure that your wiring avoids earth ground loops that may affect the performance of your equipment.

#### NOTE

Instrument grounding is required to ensure stable performance and to limit the effects of radiofrequency interference before installation.

The following diagram shows the terminal module layout and terminal identification as well as the jumper locations.


#### Transmitter Terminals

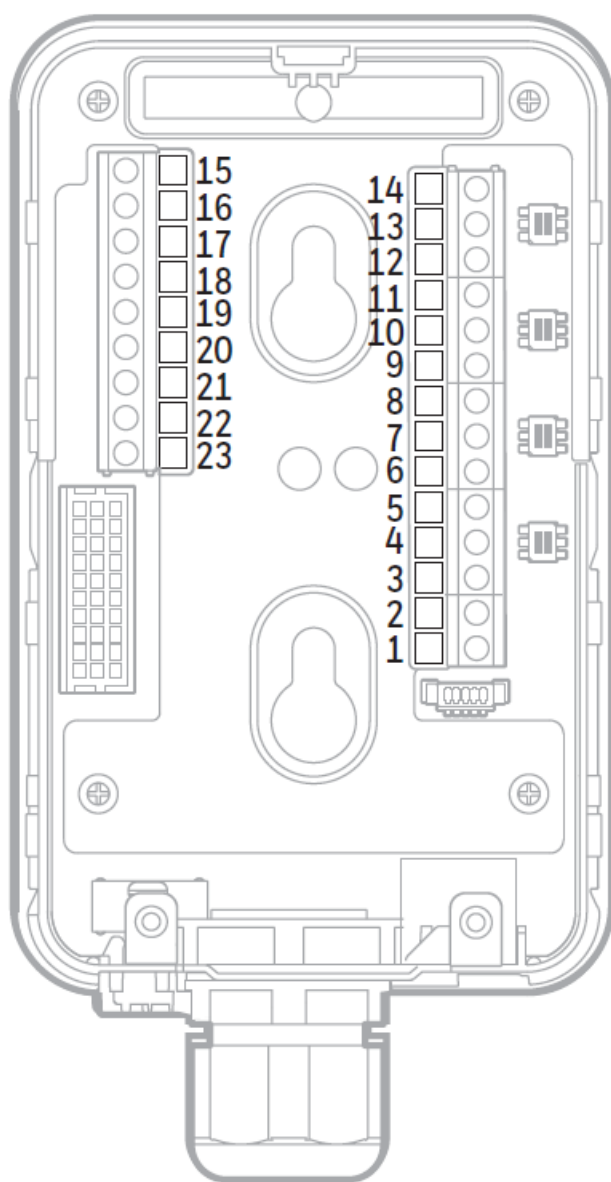

### Transmitter Terminals

terminal number	function	description
1	24Vdc Input	0Vdc
2	24Vdc Input	+24Vdc
3	mA output - Channel 1	COM
4	mA output - Channel 1	mA-
5	mA output - Channel 1	mA+
6	mA output - Channel 2	COM
7	mA output - Channel 2	mA-
8	mA output - Channel 2	mA+
9	mA output - Channel 3	COM
10	mA output - Channel 3	mA-
11	mA output - Channel 3	mA+
12	mA output - Channel 4	COM
13	mA output - Channel 4	mA-
14	mA output - Channel 4	mA+
15	Relay 1	Normally Closed
16	Relay 1	Common
17	Relay 1	Normally Open
18	Relay 2	Normally Closed
19	Relay 2	Common
20	Relay 2	Normally Open
21	Relay 3	Normally Closed

terminal number	function	description
22	Relay 3	Common
23	Relay 3	Normally Open

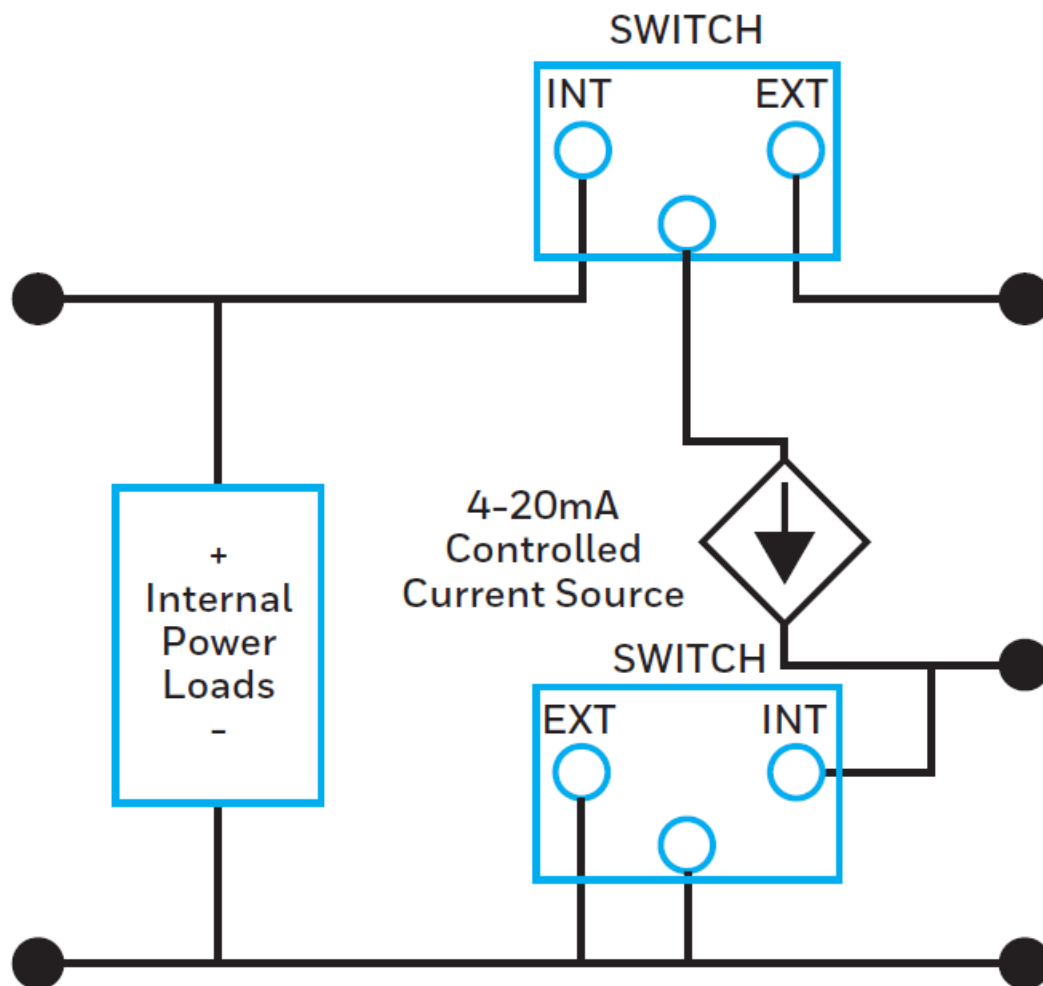

Relay function table

Display	Description	Relay 1	Relay 2	Relay 3
INSTRUMENT F ONLY	Instrument fault only	Alarm 1	Alarm 2	Instrument fault
SEPARATE F	Separate fault relays	Any alarm	Maintenance fault	Instrument fault
COMBINED F	Combined fault relay	Alarm 1	Alarm 2	Any fault

# Electrical Connection


Midas-M can be powered by either 24 VDC via traditional discrete wiring or by approximately 48 VDC delivered through the Ethernet cable from a PoE source. In either case, the 4-20 mA analog output can be used.

The analog output can be configured for fully isolated operation. With 24 VDC power the 4-20 mA output can be configured for sink, source or isolated output operations. Following are some schematic diagrams of typical electrical connection configuration.


## NOTE

When wiring the Midas-M Transmitter to a controller, program the controller for a 1-2 second delay before reporting to prevent false alarms.


Generic example Midas-M 3-wire sourcing

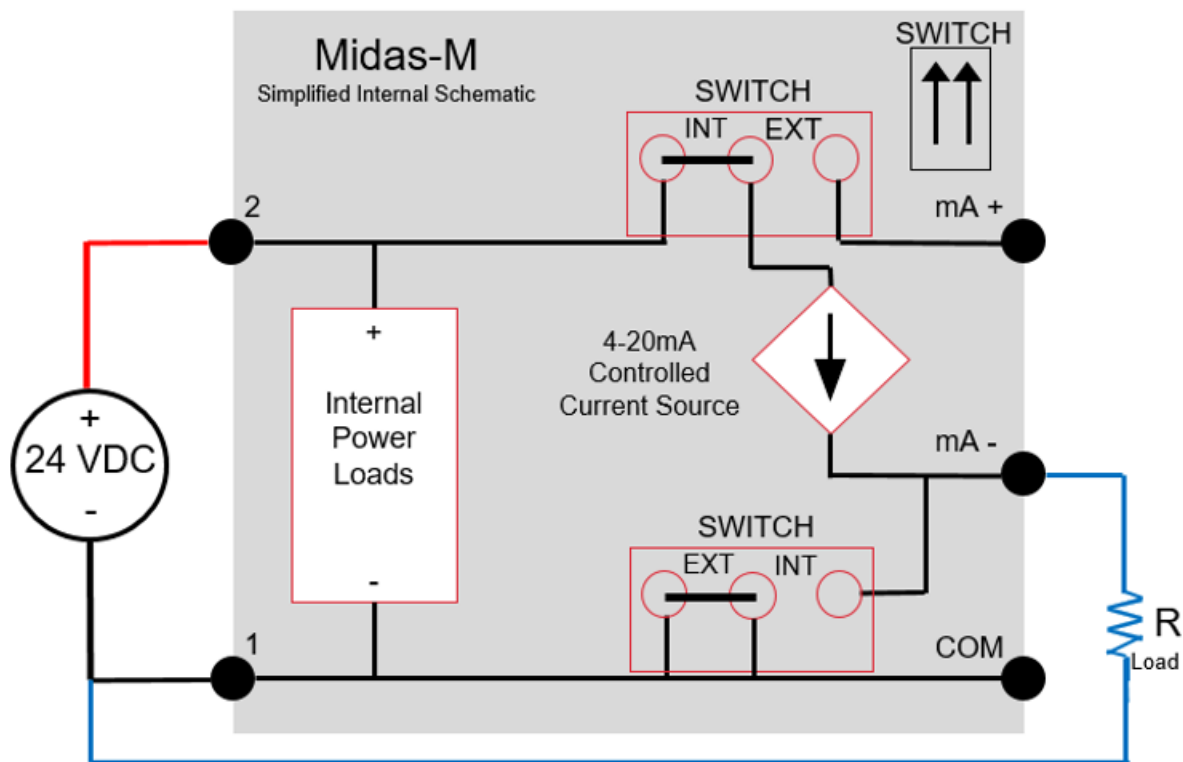

Generic example Midas-M 4-Wire Isolated output

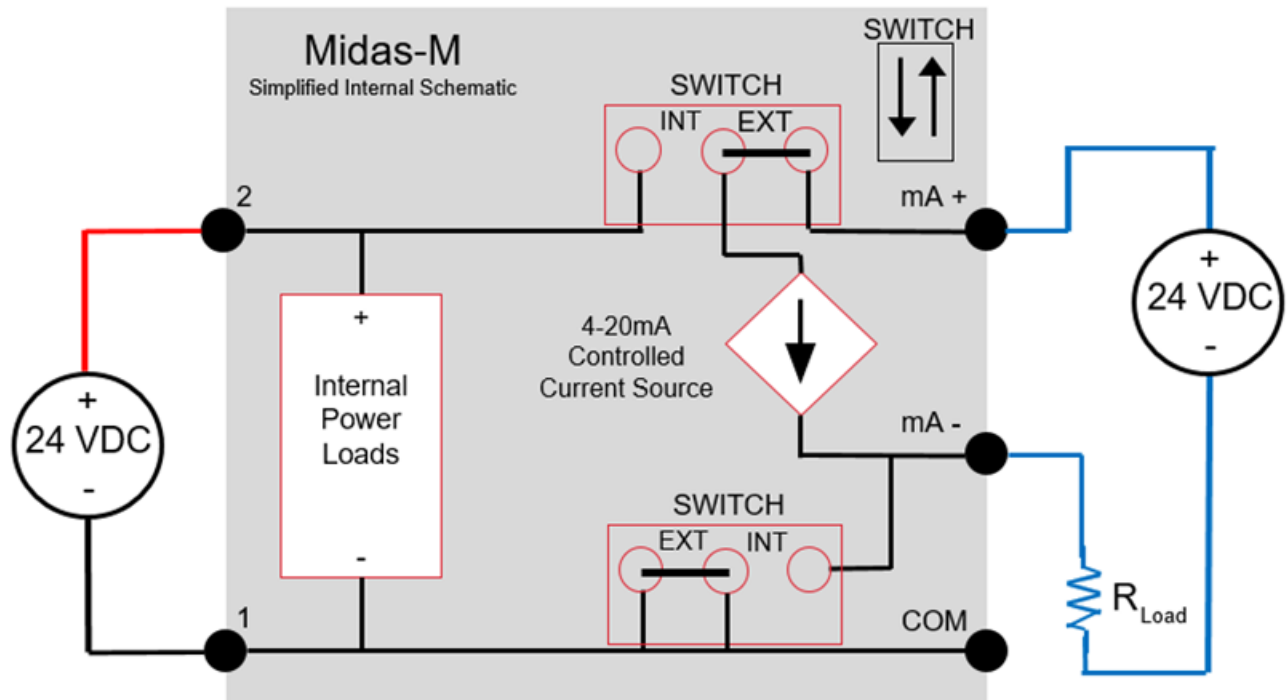


Generic example Midas-M 3-wire Sinking output

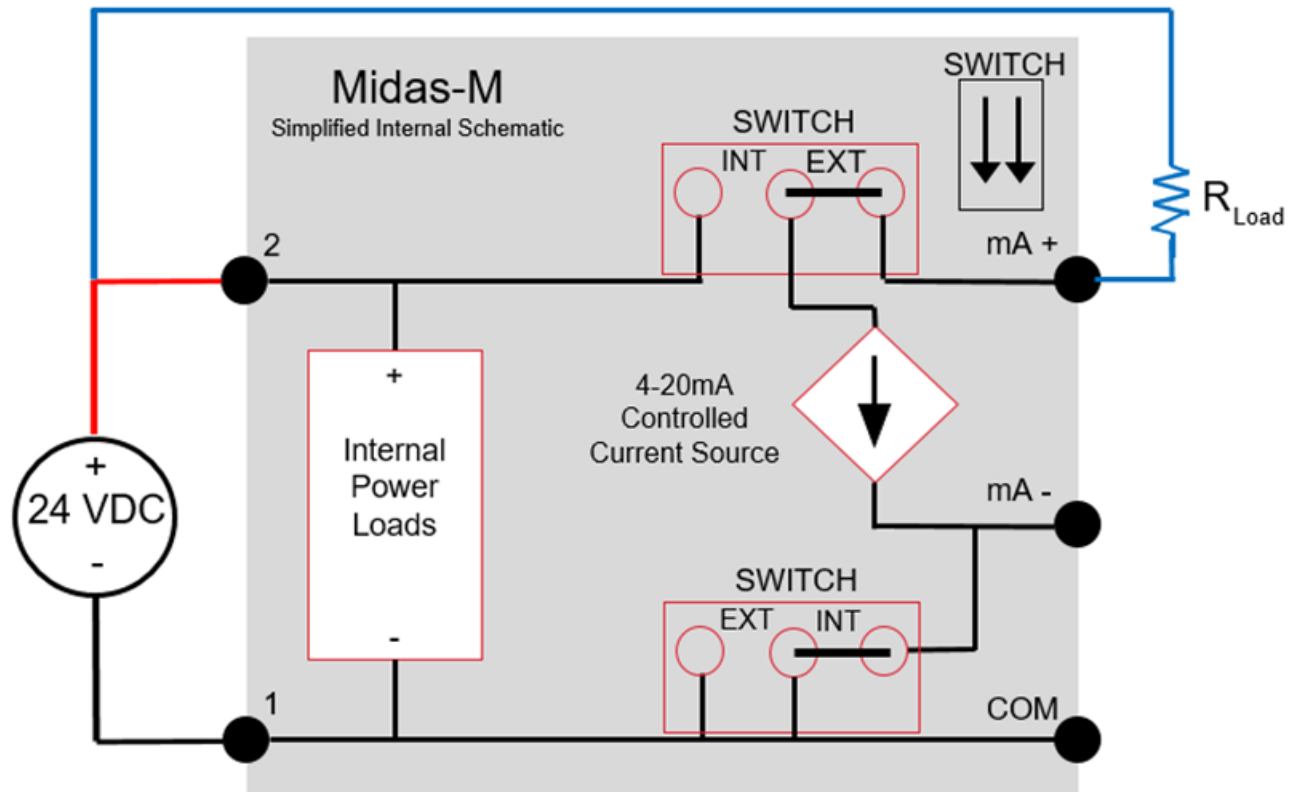



Generic example Midas-M Isolated 4-20mA output w/PoE power

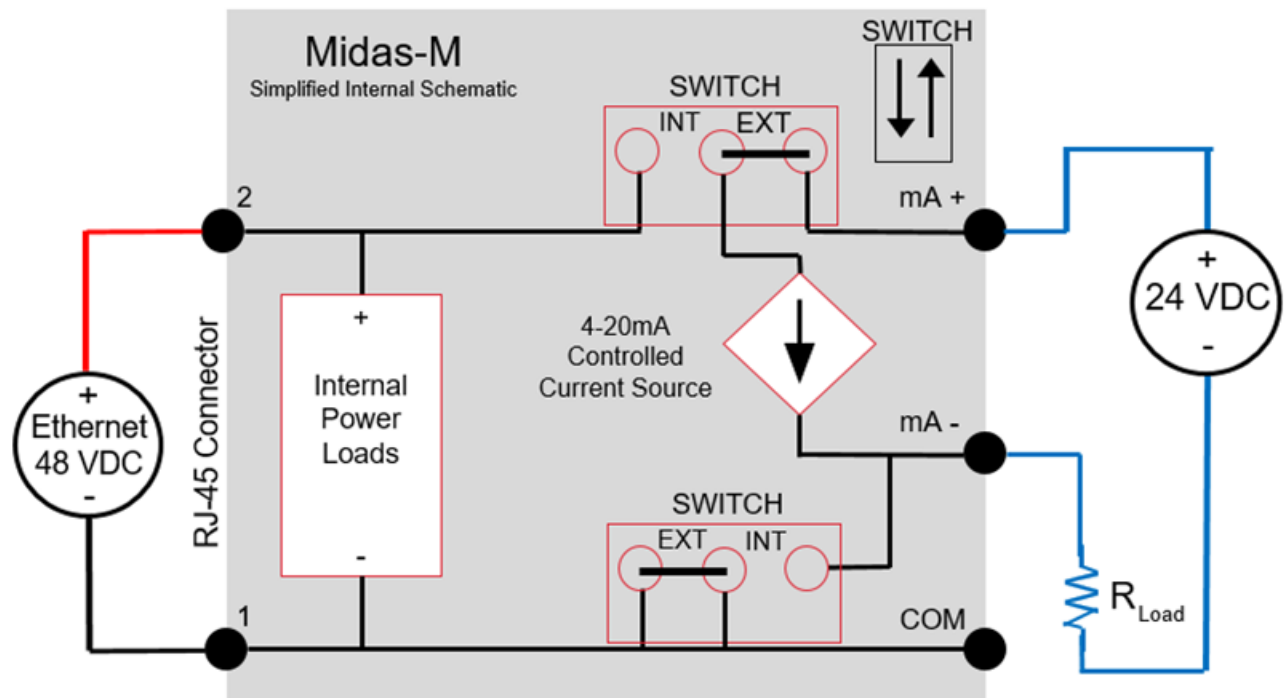


# Wiring The Relay Module

The Midas-M relay module contains:

Nine relays to activate external devices.

Eight gas alarm relays which indicate level 1 and level 2 alarms of each channel.

A common fault relay which indicate maintenance fault or instrument fault.

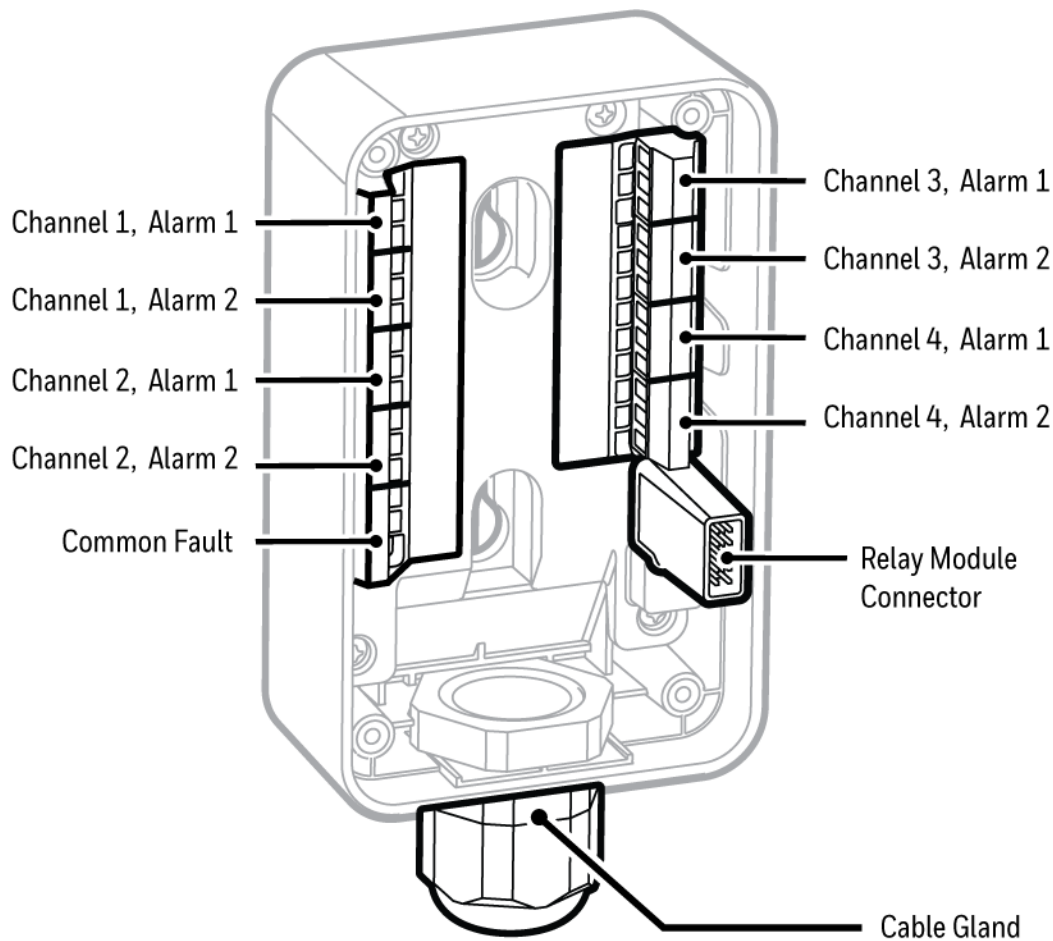

## Power Supply

No separated power supply required Supplied from the Midas-M transmitter

## Power consumption

< 1.45 W

## Relay rating

1.0 A @ 30VDC or 0.5 A @ 125 VAC max, 10 uA @ 10 mV minimum

## Wiring

14 AWG maximum per each channel

### Default configuration

All alarm relays

Normally de-energized, energized on alarm

Common fault relay


Normally energized, de-energized on fault

# Mount The Sensor Cartridge

The Midas-M Sensor Cartridge enables the detection of a wide range of asphyxiant, toxic, flammable, pyrophoric, corrosive, and oxidizer (including Oxygen) gases. The plug & play Sensor Cartridge is located inside the detector's chassis.

## NOTE

The Midas-M sensor cartridge is supplied separately.  
Before use, verify the part number and type of sensor cartridge is correct for your application.

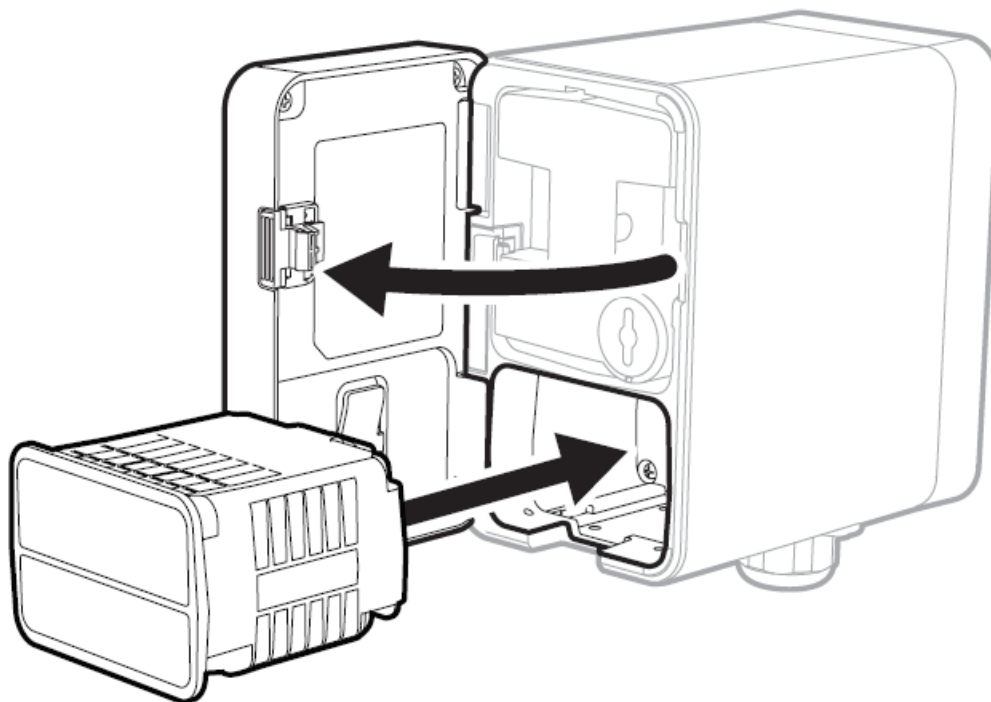

1. Turn the power off.
2. Open the door and remove the BiAS battery module and the two plug caps from the sensor cartridge.
3. Align the Sensor cartridge pins with the socket in the sensor cartridge chamber and then push the sensor cartridge gently until fully seated.
4. Close the door.
5.
  - a. Press the 'O' button to clear the "Detect New Cartridge " message.
  - b. Confirm that the green LED is flashing, and that the yellow and red LEDs are off.
  - c. Confirm the display shows a concentration of zero as appropriate.

# 3

## Device & Web Operations

Learn what you can do with your Honeywell Midas®-M Detector, from commissioning to Maintenance

### Comissioning

Comissioning should be followed carefully and only performed by suitably trained personnel.

#### **WARNING**

**Before carrying out any work, ensure local and site procedures are followed. Ensure that the associated control panel is inhibited to prevent false alarms.**

1. Ensure the detector is wired correctly.
2. Ensure that the correct sensor cartridge is fitted. (If the cartridge has not been stored at room temperature, allow one hour for equilibration.)
3. Ensure the ON/OFF switch on the bottom of the mounting bracket assembly is in the **ON** position.
4. Apply power to the system. Wait for a couple of minutes until the start-up routine completes.
5. After the start-up routine, the detector will display the Normal/Monitoring Operating Mode.
6. Perform a leak test to ensure all connections are secure. 'Waiting...' will be displayed on booting time.
7. Allow the detector to stabilize until the 'Warm-up' message is no longer displayed after booting. The maximum warm-up time is dependent on sensor type. Refer to individual cartridge data sheets. Warm-up times are typically much faster.
8. Ensure the correct ID code is selected in **Set-up > alarm** menu
9. If this is a first-time start-up, the "Detect New Cartridge ~" message could be displayed. Press the 'O' button to clear the message.

# Monitoring Mode

After commissioning, the Midas-M detector is set in the Monitoring Mode, which is the starting point for all of the device's operations.



The examples in the following table are for a linear 4-20 mA output over a full scale range of 2 ppm. The current output for a given gas concentration will be different for other full scale ranges (linear 4 mA = 0 % full scale to 20 mA = 100 % full scale). The alarm and fault relays are in default (latching) mode.

## Normal Operation Display and Outputs.



This table is based on the default configuration of toxic sensor type.

Status	Relay Status	4-20mA out-put	LEDs	Backlight
Alarm 1	Alarm relay 1 activated	mA output to match the concentration	Green flash Alarm 1 Red on	Red on of the channel
	Alarm relay 2 de-activated			
	Fault relay de-activated			





Status	Relay Status	4-20mA out-put	LEDs	Backlight
Alarm 2	Alarm relay 1 activated Alarm relay 2 activated Fault relay de-activated	mA output to match the concentration	Green flash Alarm 1 Red on Alarm 2 Red flash	Red flash of the channel
Greater than full scale	Alarm relay 1 activated Alarm relay 2 activated Fault relay de-activated	21mA	Green flash Alarm 1 Red on Alarm 2 Red flash Yellow on	Yellow on of the channel
Inhibit	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay de-activated	2mA	Green flash	
Maintenance fault	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay de-activated	3mA	Green flash Yellow on	Yellow on of the channel or all channels dependent on fault type
Instrument fault	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay activated	1mA	Green flash Yellow flash	Yellow flash of the channel or all channels dependent on fault type

# Review Information

From the Review Mode, you can see the information of transmitter, cartridge, alarm, 4-20mA, relays, fault, calibration, date/time, network, event log, and advance.

1. Go to the Monitoring Mode.
2. By pressing  or  buttons you are entered automatically to the Review Mode and one of the Review options is displayed under **Review**.



3. Press  or  buttons to scroll to your desired option.
4. Press  to accept and enter the selected option.
5. Repeat Steps 3 and 4 to continue exploring more options from the Review Mode.
6. Optional Step: Press  to cancel and return one step back.

From the Review Mode panel, you can review any of the following options:



Option	Information you can review from selected option
Transmitter	<ul style="list-style-type: none"><li>• FW Revision</li><li>• Part Number</li><li>• Serial Number</li><li>• FW checksum</li><li>• Web version</li></ul>
Cartridge	<ul style="list-style-type: none"><li>• FW Revision</li><li>• Boot loader revision</li><li>• Part Number</li><li>• Serial Number</li><li>• Sensor parameter revision of each channel</li></ul>
Alarms	<ul style="list-style-type: none"><li>• Gas type of each channel</li></ul>











Option	Information you can review from selected option
	<ul style="list-style-type: none"> <li>• Alarm 1 type and level of each channel</li> <li>• Alarm 2 type and level of each channel</li> <li>• Deadband level of each channel</li> <li>• Alarm latching/non-latching of each channel</li> <li>• Alarm delay time of each channel</li> </ul>
4-20mA	Concentration range of 4-20mA output of each channel
Internal Relays	<ul style="list-style-type: none"> <li>• Relay configuration</li> <li>• Relay energized/de-energized in normal condition</li> </ul>
External Relays	Relay energized/de-energized in normal condition
Faults	<ul style="list-style-type: none"> <li>• Latching/Non-latching</li> <li>• Maintenance fault enable/disable</li> <li>• Temperature fault enable/disable</li> </ul>
Calibration	<ul style="list-style-type: none"> <li>• Calibration interval of each channel</li> <li>• Calibration due days of each channel</li> <li>• Sensor expired days of each channel</li> </ul>
Alarm Voting	<ul style="list-style-type: none"> <li>• Alarm voting enable/disable</li> </ul>
LIT	<ul style="list-style-type: none"> <li>• LIT enable/disable</li> <li>• LIT test period (hours)</li> </ul>
Date/Time	Date and Time
Network	<ul style="list-style-type: none"> <li>• IP obtain method</li> <li>• IP address</li> <li>• Subnet Mask</li> <li>• Gateway</li> <li>• MAC Address</li> </ul>
Event Log	Event logs
Advance	Channel ON/OFF
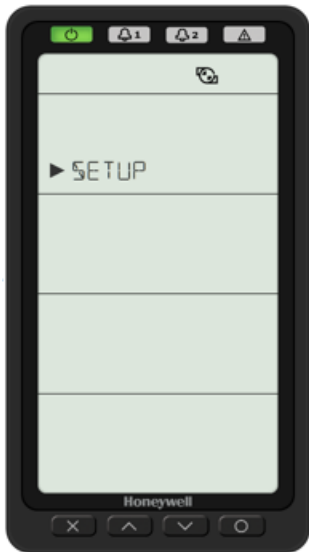
# Setup Operations

From the Setup Mode, you can configure alarms, 4-20mA, relays, faults, channels, date & time, network, advance, and security.

1. Go to the Monitoring Mode.
2. Press  or  buttons and hold for one second to enter the Main Menu, and one of the Menu options is displayed.



3. Press  or  buttons to scroll to **Setup**.
4. Press  to accept and enter the Setup menu.
5. Press  or  to continue exploring more options from the Setup Mode, and then press  to accept it.
6. Optional Step: Press  to cancel and return one step back.

From the Setup Mode panel, you can review any of the following options:

Option	Operations you can Setup from selected option
Alarms	<ul style="list-style-type: none"><li>• Gas type of each channel</li><li>• Correlation factor of each channel if gas type is “USER”</li><li>• Alarm 1 type and level of each channel</li><li>• Alarm 2 type and level of each channel</li><li>• Deadband level of each channel</li><li>• Alarm latching/non-latching of each channel</li><li>• Alarm delay time of each channel</li></ul>
4-20mA	Concentration range of 4-20mA output of each channel.
Internal	<ul style="list-style-type: none"><li>• Relay configuration (Instrument Fault Only, Separate Fault Relay,</li></ul>

Option	Operations you can Setup from selected option
Relays	Combined Fault Relay). <ul style="list-style-type: none"> <li>Relay energized/de-energized in normal condition.</li> </ul>
External Relays	Relay energized/de-energized in normal condition.
Faults	Latching/Non-latching Maintenance fault enable/disable Temperature fault enable/disable.
Calibration	Calibration interval of each channel
Alarm Voting	<ul style="list-style-type: none"> <li>Alarm voting enable/disable</li> <li>Set Primary channel and voting level</li> <li>Reading condition of 2nd ~ 4th channel</li> <li>Voting condition</li> </ul>
LIT	<ul style="list-style-type: none"> <li>LIT enable/disable</li> <li>LIT test period (hours)</li> </ul>
Date/Time	<ul style="list-style-type: none"> <li>Date</li> <li>Date format (YYYY MM DD, DD MM YYYY, MM DD YYYY)</li> <li>Time</li> </ul>
Network	<ul style="list-style-type: none"> <li>IP obtain method (Manual, Auto)</li> <li>IP address</li> <li>Subnet Mask</li> <li>Gateway</li> </ul>
Advance	Channel ON/OFF
Security	<ul style="list-style-type: none"> <li>Security ON/OFF</li> <li>Password</li> </ul>

# Test Mode

From the TestMode, you can test Bump, Simulation, 4-20mA, and Inhibit.

1. Go to the Monitoring Mode.
2. Press  or  buttons and hold for one second to enter the Main Menu, and one of the Menu options is displayed.



3. Press  or  buttons to scroll to **Test**.
4. Press  to accept and enter the Test menu.
5. Press  or  to continue exploring more options from the Test Mode, and then press  to accept it.
6. Optional Step: Press  to cancel and return one step back.






From the Test Mode panel, you can test any of the following options:

Option	Operations you can Test from the selected option
Bump	Gas bump test
Simulation	<ul style="list-style-type: none"><li>• Alarm 1 of each channel</li><li>• Alarm 2 of each channel</li><li>• Maintenance Fault</li><li>• Instrument Fault</li></ul>
4-20mA	Force 4-20mA output of each channel
LIT	<ul style="list-style-type: none"><li>• LIT Test</li></ul>





Option	Operations you can Test from the selected option
Inhibit	<ul style="list-style-type: none"> <li>• Inhibit ON/OFF</li> <li>• Inhibit time</li> </ul>

# Calibration Mode

From the Configuration Mode, you can configure Zero, Span, Flow, and 4-20mA.

- 1. Go to the Monitoring Mode.
- 2. Press  or  buttons and hold for one second to enter the Main Menu, and one of the Menu options is displayed.
- 3. Press  or  buttons to scroll to **Calibration**.
- 4. Press  to accept and enter the Calibration menu.



- 5. Press  or  to continue exploring more options from the Calibration Mode, and then press  to accept it.
- 6. Optional Step: Press  to cancel and return one step back.

From the Calibration Mode panel, you can configure any of the following options:

Option	Operations you can calibrate from the selected option
Zero	Zero gas calibration of each channel
Span	Span gas calibration of each channel
Flow	Pump flow calibration
4-20mA	4-20mA output calibration of each channel
LIT	LIT calibration

# Calibration & Bump Test

All Midas-M sensor cartridges are pre-calibrated by Honeywell Analytics using traceable gas standards and approved calibration methods to a proven ISO 9000 quality controlled procedure. The Midas-M sensor cartridge design is very robust and resistant to long term drift; in fact in a normal operating environment it is possible to extend the calibration interval with Midas-M up to 24 months (subject to local requirements concerning calibrations). This design feature is another element that supports Midas-M as a long term cost effective gas detection solution. Honeywell Analytics recommends frequent bump testing to confirm performance.

## NOTE

It is the sole responsibility of each user to determine their own calibration and bump test schedule based on their own safety assessments and understanding of local requirements.

Just prior to commissioning, each Midas-M unit should be zero calibrated to ensure accuracy. It is recommended that the unit be powered with the cartridge installed for at least 30 minutes prior to conducting a zero calibration. A second zero calibration may be required after a 24 hour period which is dependent on the site conditions. O2 sensors are not zero calibrated but should be span gas calibrated. See the Gas Table for span gas calibration details. If the ambient condition in the area the detector is monitoring experiences a long-term change, it is necessary to perform a zero calibration to allow the unit to adjust to the new conditions.

## NOTE

When performing a zero calibration, be sure that the area is free of the target gas and/or interfering gases (refer to the cartridge data sheets for further details), as the presence of a background gas will affect the ability for the detector to properly calibrate to the correct levels. If the sample area cannot be verified to be free of the target gas or cross-sensitive gases, use a cylinder of zero air to perform the calibration

Calibration of an electrochemical sensor cartridge is a relatively complex discipline to master and it is possible that in less ideal field conditions the calibration can be far less accurate than under laboratory conditions and therefore substantial inaccuracies can be introduced. In the absence of any formal calibration policy by the end user, it is preferable to retain the original factory calibration.

Care must be taken to ensure that the correct materials for an extractive application are obtained from reputable suppliers and are of proven quality and composition. Inappropriate calibration equipment will lead to under - or over-presenting the wrong concentration of gas to the sensor cartridge during the calibration period. Likewise contaminated or inadequately flushed tubing and other gas-wet surfaces can also introduce errors into the calibration process. Only qualified, trained personnel should attempt to perform gas calibrations; contact your local Honeywell Analytics Service Representative for further details on calibration services. Testing should be performed at the end of the sample tube or at the detector with a short length of tubing. Applying gas with a short length (less than 5 feet/1.5 meters) of clean FEP tubing will give optimal results for confirming the accuracy and response time of the cartridge.

Applying gas at the end of the installed sample line will test the full system including the whole length of tubing. This will verify the integrity of the tubing. Sample line integrity can also be

checked by performing a leak check. Note that there will be additional transport time due to the tubing length and conditioning the gas-wet surfaces.

Bump tests are also used as an approximate means to present a controlled gas release to the sensor cartridge in order to verify that the transmitter does respond accordingly. Bump testing is popular as typical experiences show that a smaller list of easier to handle gases can be used to provide functional tests on a wider range of gas types. In the absence of a formal calibration policy from the end user, Honeywell Analytics would recommend a minimum semi-annual schedule of at least one bump test per sensor with the appropriate test gas.

Bump testing may reduce sensor cartridge lifetime and the accuracy of the calibration if applied incorrectly or too frequently. Use only the target gas or the recommended bump test gas.

Zero calibration is a recommended procedure that should be performed periodically to improve the performance of the sensor. This is particularly important when the sensor is operating outside of normal environmental conditions (20°C, 50% rH).

The Gas Table indicates the recommended calibration or bump test gas for the Midas-M sensor cartridges:

Consult with your Honeywell Analytics Service Representative for approved methods and materials before commencing calibrations and bump tests.

## Bump Test

A bump test is not intended to be an accurate calibration, but is used as a confidence check to ensure that the gas detection system is functional. Since some of the target gases are difficult to handle, bump testing often makes use of cross sensitivities so that more convenient gases can be used. In bump test mode, the Modbus/TCP outputs are not inhibited. Only the 4-20 mA and alarm outputs are inhibited. The bump gas test is a functional check only. Consult local guidelines for recommended best practices. Bump test concentrations are calculated to generate a minimum first alarm level response.

## Preparation

Most of the test gases are highly toxic. It is essential that personnel using these toxic gases be trained in their use. Ensure that the test gas will be vented safely.

Applying test gas may cause alarm, fault or maintenance fault indications on the 4-20 mA loop, relays or digital outputs. Before starting a test, ensure that suitable steps have been taken to prevent these indications from triggering unwanted actions. The Midas-M gas detector has a special mode for bump testing where the alarm outputs are inhibited.

## Finishing

Wait for the gas reading to return to normal levels. This may take some time, especially if concentrations above the recommended levels have been used or if the test gas has been applied for an extended period of time.

Ensure that any latched faults or alarms that have been generated by the testing have been cleared.



Make sure that the gas detection system is fully restored to its normal operating state and that any control system overrides used during the testing have been removed.

The alarms generated by the testing will have created entries in the transmitter's history log.

## Troubleshooting

If the test does not produce a satisfactory result, check the following points:

- Check the gas cylinder concentration and type are correct
- Check the expiration date of the cylinder.
- Check that there is sufficient gas left in the cylinder.
- Check that there are no leaks on the test system.
- Make sure that the tubing length is as short as possible and that there are no blockages.
- Make sure that the transmitter is not displaying a fault before the test is started.

# Internal Web Server

The Midas-M gas detector unit utilizes an Ethernet port with the TCP/IP protocol as standard. The Midas-M can function as a HTML web page server and these web pages can be viewed on external computer equipment (PC, PocketPC etc.) by using a standard software program, i.e.; Microsoft Internet Explorer 11, Safari, or Chrome . These web pages replicate the user interface on the front panel of the Midas-M in a more flexible and friendly format for diagnostic and data entry purposes. The web pages also contain additional features not available via the keypad.

This procedure explains how to view web pages for a single Midas-M which is connected to a single PC only. Of course it is possible to connect hundreds of Midas-M units to an Ethernet network. More information may be required from the local IT department and Honeywell Analytics as appropriate.

## Physical Network Components

The Ethernet physical network is intended to connect computers to other computers through hubs. MIDAS-M has a 10/100 Mbps Ethernet transceiver and supports Auto-MDIX. It supports Auto-Negotiation for selecting the highest performance mode of operation. To use CAT5 standard or higher shield ethernet cable is recommended for the highest efficiency communication speed.


## Internet Settings

Communications requires knowledge of the IP address and netmask of both the Midas-M and the PC. Unless the Midas-M is connected to a network with a DHCP server, the addresses must be set manually.

The procedure for setting the IP address of a PC is detailed in the following example using a PC loaded with Microsoft™ Windows 7 and Internet Explorer version 11.0 or higher as illustrated as follows.

In the usual case the netmask for both computers should be set to 255.255.255.0. The most-significant three bytes of the IP address must be identical and the least-significant byte must be unique. For example, if the IP address of the Midas-M was set to 169.254.60.47 (the factory default) then an appropriate IP address for the PC would be 169.254.60.42.

IP Address setting in Windows 7

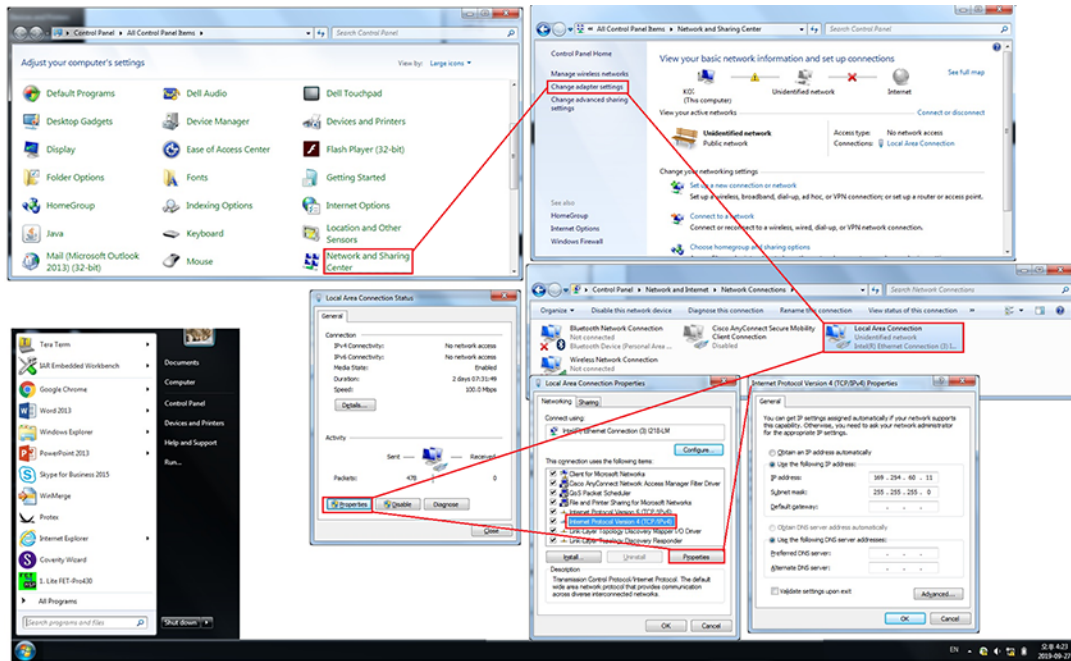

# Running the Web Server


In a web browser, set the URL to “http://xxx.xxx.xxx.xxx” where the “xxx” fields are replaced with the IP address of the Midas-M.

## Device's Overview

Display general information about the device and gas information of each channel.

From the home page, select **Review > Status**.

The following image shows the information you can review from the Overview page.

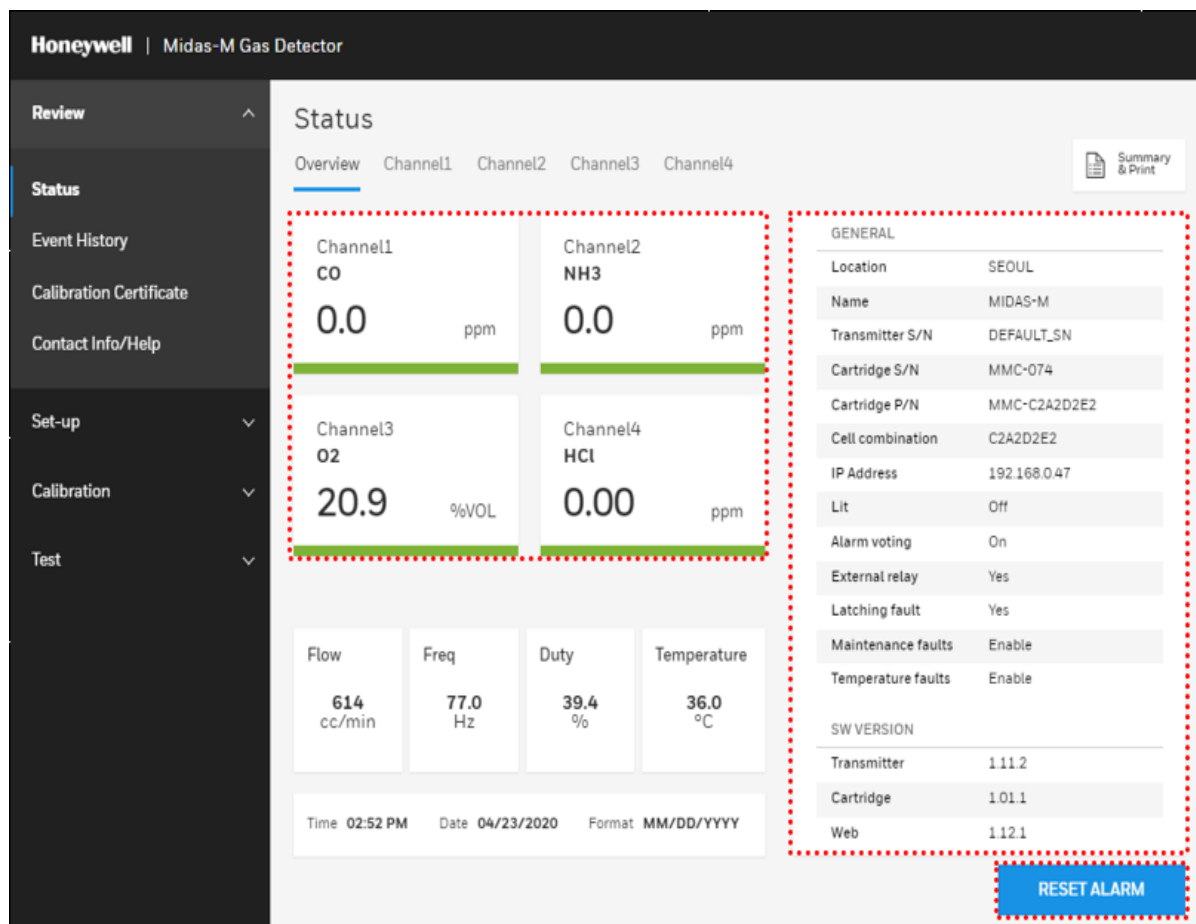

Option	Description
Channels	The gas information for each channel is displayed. The color bar under each box shows the status of the channel.
General	Device's general information
Summary & Print	A print-ready summary of device's information.
Reset Alarm	If alarms are occurring, reset the alarms.

## Log Review

On this page, you can view information about records in text format and as a detailed graph. From the home page, select **Review > Event history**.

Honeywell | Midas-M Gas Detector

Review

Status

Event History

Calibration Certificate

Contact Info/Help

Set-up

Calibration

Test

Event History

Summary & Print

DATE/TIME	TYPE	CHANNEL	DESCRIPTION	DATA1, DATA2, DATA3, DATA4, DATA5, DATA6	DETAILS
2020 02 17 16:15:19	Information	2 (SO2(User))	Simulate Alarm1	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:15:15	Information	-	Cartridge and Cells are Same	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:15:11	Fault	-	F60: [The cartridge absent] Cleared	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:14:31	Fault	-	F60: [The cartridge absent] Occurred	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:14:04	Information	-	Test Bump Stop	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:56	Information	-	Test Bump Start	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:10	Warning	4 (SO2)	M20: [Calibration Expired] Occurred	-232.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:10	Warning	3 (SO2)	M20: [Calibration Expired] Occurred	-232.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:10	Warning	2 (SO2(User))	M20: [Calibration Expired] Occurred	-232.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:10	Information	-	Cartridge and Cells are Same	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:13:04	Information	-	Device Power-Up	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:11:27	Alarm	2 (SO2(User))	Alarm1 Occurred	2.000, 2.000 4.000, 10.00 403.0, 162.0	>
2020 02 17 16:11:24	Information	-	Cartridge and Cells are Same	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:11:21	Fault	-	F60: [The cartridge absent] Cleared	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:09:57	Fault	-	F60: [The cartridge absent] Occurred	0.000, 0.000 0.000, 0.000 0.000, 0.000	
2020 02 17 16:09:55	Alarm	2 (SO2(User))	Alarm1 Occurred	2.000, 2.000 4.000, 646.0 640.0, 630.0	>

Events 145 to 160 of 1286

<< < 6 7 8 9 10 > >>

10/81 >

RESET ALARM

MAKE PRINTABLE VERSION

The following graph shows detailed information about the selected log. The graphic displays the gas concentration before and after a specific time from when the event occurred.

Review

Status

Event History

Calibration Certificate

Contact Info/Help


Set-up

Calibration

Test

Event Details

Time stamp:	2020 02 14 15:09:10	Serial number:	DEFAULT_SN
Gas:	SO2(User)	Location:	SEOUL
Description:	Alarm1 Cleared	Name:	MIDAS-M
Concentration:	0.17 ppm	IP Address:	192.168.0.47

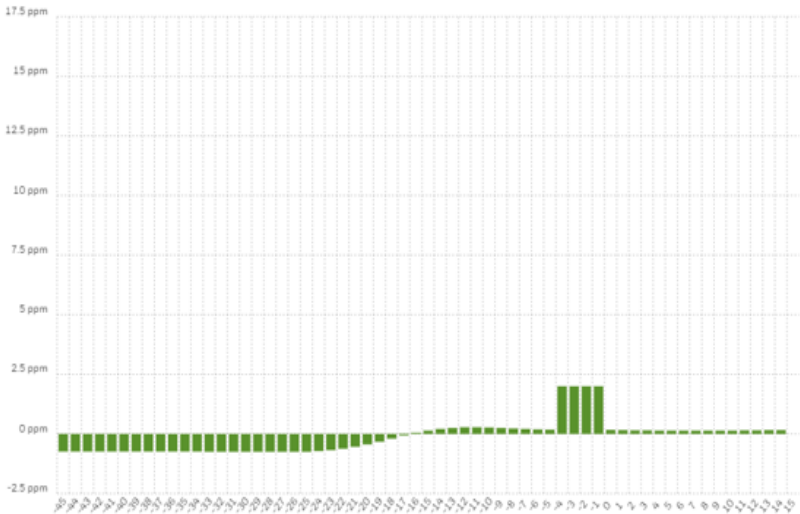

## Get a Calibration Certificate

Get the calibration information implemented on a per-channels basis when the device was manufactured.

On this page, you can view information from the producer, device, and name of the calibrator.

From the home page, select **Review > Calibration Certificate**.

Honeywell | Midas-M Gas Detector

Review

Status

Event History

Calibration Certificate

Contact Info/Help

Set-up

Calibration

Test

Calibration Certificate

Channel1Channel2Channel3Channel4

Summary & Print

Honeywell

Honeywell Analytics Ltd

7F SangAm IT Tower,

434 Worldcup Buk-ro, Mapo-gu,

Seoul 03922, Korea

Tel: +82 (0)2 6909 0300

Fax: +82 (0)2 2025 0388

Email: [analytics.ap@honeywell.com](mailto:analytics.ap@honeywell.com)

Web: [www.honeywellanalytics.com](http://www.honeywellanalytics.com)

Electronic certificate of calibration

Part Number

MMS-C2

Serial Number

K01A0619010000

Calibration Date

11 2019 00:00:00

Factory Calibration Gas

Carbon Monoxide (0.0 ~ 100.0 ppm)

This sensor cartridge was calibrated using equipment which is subject to regular verification and whose calibration is traceable to national standards. Gases for which traceability to national standards is not available have been obtained from reputable sources.

The calibration was carried out in accordance with the general requirements of the company's BS EN ISO 9001:2015 approval.

Records are kept for all sensor cartridge calibrations and copies are available on request.

Calibrated by: Operator

MAKE PRINTABLE VERSION

Midas-M

48

User Manual



To get fault's list and Contact info, select **Review > Contact Info/Help**.

idas-M

## Set up Gas and Alarm

Set up gas detection and alarm set for each channel.

On the home page, select **Set-up>Gas/Alarm**.

1. Set the desired channel.
2. Gas: Set the gas you want to detect on each channel. Gas-name and K-factor (weight value for gas value) can be set only for User-gas.

**Note:** You cannot set the range.

3. Set the concentration at which Alarm1 occurs.
4. Set the concentration at which Alarm2 occurs.
5. Enter the **Dead band**.
6. Enter the **Alarm delay**. When an alarm condition is reached, an alarm occurs at a delayed time.
7. Set up **Latching** in an alarm situation.
8. Set the time for calibrating the progress alarm.
9. Click **Accept**.

Honeywell | Midas-M Gas Detector

Review

Set-up

General

Gas/Alarm

Relays

4-20 mA

Faults

Alarm Voting

LIT

Network

Time/Date

Sensor On/Off

Calibration

Test

### Gas/Alarm

Channel1 Channel2 Channel3 Channel4

Summary & Print

Set-up gas

Gas name • CO User gas name • K-factor • Range 0.0 - 100.0 ppm

Alarm level 1 • 12.5 ppm Normal (up) Depletion (down)

Alarm level 2 • 25.0 ppm Normal (up) Depletion (down)

Dead band • 11.0 ppm

Alarm delay • 3 seconds Latching alarms • Yes Calibration period • 180 days

RESET TO DEFAULT RESET ACCEPT

## Configure the Relays

Set the Alarm and Fault relays.

On the home page, select **Set-up > Relays**.

You can set the relays as follows:

- **Relay configuration:** Set the operation conditions for Relay 1,2,3.
- **Alarm relay:** Set whether to generate alarm relay.
- **Fault relay:** Set whether to generate a fault relay.
- **External relay configuration:** Set the operation conditions for External relay.
- **External fault relay:** Set whether to generate a external fault relay.

**Honeywell | Midas-M Gas Detector**

**Review** **Set-up** **General** **Gas/Alarm** **Relays** **4-20 mA** **Faults** **Alarm Voting** **LIT** **Network** **Time/Date** **Sensor On/Off** **Calibration** **Test**

### Relays

**Set-up** [Summary & Print](#)

**Relay configuration**

	Relay1	Relay2	Relay3
<input checked="" type="radio"/> Instrument fault only	Alarm1	Alarm2	Instrument fault
<input type="radio"/> Separate fault only	Any alarm	Maintenance fault	Instrument fault
<input type="radio"/> Combined fault only	Alarm1	Alarm2	Any fault

**Alarm relay**

☐ Energized ☒ De-energized

**Fault relay**

☒ Energized ☐ De-energized

**External relay configuration**

	Alarm1	Alarm2
Channel1	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized
Channel2	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized
Channel3	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized
Channel4	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized	<input type="radio"/> Energized <input checked="" type="radio"/> De-energized

**External fault relay**

☒ Energized ☐ De-energized

**RESET** **ACCEPT**

## Set up the 4-20 mA

Set the ratio of mA and concentration values.

On the home page, select **Set-up > 4-20 mA**.

You can set the 4-20mA as follows:

- **Channel:** Select the channel to set.
- **Output 4 mA:** Set the gas concentration for 4mA.
- **Output 20 mA:** Set the gas concentration for 20mA.

The screenshot shows the Honeywell Midas-M Gas Detector's configuration interface. On the left is a dark sidebar menu with options: Review, Set-up (selected), General, Gas/Alarm, Relays, 4-20 mA, Faults, Alarm Voting, LIT, Network, Time/Date, Sensor On/Off, Calibration, and Test. The main area is titled '4-20 mA' and has tabs for Channel1, Channel2, Channel3, and Channel4. A 'Summary & Print' button is in the top right. The 'Set-up' section contains two input fields: 'Output 4 mA' with a value of 0.0 and 'Output 20 mA' with a value of 100.0, both followed by 'ppm'. At the bottom right are 'RESET' and 'ACCEPT' buttons.

## Set up Faults

### Set a Fault Occurrence

On the home page, select **Set-up > Faults**.

You can set the faults as follows:

- **Latching faults:** Set whether to perform latching when faults occur.
- **Maintenance:** Set whether to generate a fault for maintenance
- **Temperature:** Set whether to generate a fault for Temperature. This option is enabled if the Maintenance setting is allowed too.

The screenshot displays the Honeywell Midas-M Gas Detector web interface. On the left is a dark sidebar menu with the following items: Review, Set-up (expanded), General, Gas/Alarm, Relays, 4-20 mA, Faults (highlighted), Alarm Voting, LIT, Network, Time/Date, Sensor On/Off, Calibration, and Test. The main content area is titled 'Faults' and contains a 'Set-up' section with three radio button options: 'Latching faults' (Yes selected), 'Maintenance' (Enable selected), and 'Temperature' (Enable selected). A 'Summary & Print' icon is in the top right corner. At the bottom right of the main area are 'RESET' and 'ACCEPT' buttons.

# ALARM VOTING

Set an alarm voting

On the home page, select **Set-up > Network**.

You can set the alarm voting as follows:

1. On/Off Alarm voting function
2. Set the desired channel as a Primary channel
3. Select option in Primary channel
4. Set channel for Secondary channel
5. Select option in Secondary channel
6. Set channel for Third channel
7. Select option in Third channel
8. Set channel for Fourth channel
9. Select option in Fourth channel
10. Set Voting condition

**Honeywell** | Midas-M Gas Detector

Review

**Set-up**

General

Gas/Alarm

Relays

4-20 mA

Faults

**Alarm Voting**

LIT

Network

Time/Date

Sensor On/Off

Calibration

Test

### Alarm Voting

Summary & Print

**Set-up**

**Alarm Voting**

☒ On **1**

☐ Off

**Primary channel**

☐ Channel1 ☒ Channel2 ☐ Channel3 ☐ Channel4 **2**

**2nd channel**

☐ Channel1 ☐ Channel2 ☒ Channel3 ☐ Channel4 ☐ None **4**

**3rd channel**

☐ Channel1 ☐ Channel2 ☐ Channel3 ☒ Channel4 ☐ None **6**

**4th channel**

☐ Channel1 ☐ Channel2 ☐ Channel3 ☐ Channel4 ☒ None **8**

**Voting condition**

☒ AND **10**

☐ OR

☐ Majority

**Voting level**

Alarm 1 **3**

**Reading condition**

LDL **5**

**Reading condition**

LDL **7**

**Reading condition**

LDL **9**

RESET ACCEPT

## Set A LIT

On the home page, select **Set-up > LIT**.

You can set the LIT as follows:

- LIT On/Off: On or Off the LIT function
- Test period: Set LIT Test period

The screenshot shows the Honeywell Midas-M Gas Detector web interface. The left sidebar contains a menu with the following items: Review, Set-up, General, Gas/Alarm, Relays, 4-20 mA, Faults, Alarm Voting, LIT (highlighted), Network, Time/Date, Sensor On/Off, Calibration, and Test. The main content area is titled 'LIT' and includes a 'Summary & Print' icon in the top right. Under the 'Set-up' section, there are two settings: 'LIT on/off' with radio buttons for 'On' and 'Off' (where 'Off' is selected), and 'Test period' with a text input field and the unit 'hours'. At the bottom right of the main area are two buttons: 'RESET' and 'ACCEPT'.

## Set up the Network

Set an specific network.

On the home page, select **Set-up > Network**.

You can set the network as follows:

- **Obtain IP:** You can select whether Manual or Automatic.
- **Ip address, Subnet, and Default gateway** are enabled only when the **Obtain IP** option is set to Manual.
- **Hostname:** Hostname setting.

The screenshot shows the 'Network' configuration page for a Honeywell Midas-M Gas Detector. The interface has a dark sidebar on the left with a menu containing 'Review', 'Set-up', 'General', 'Gas/Alarm', 'Relays', '4-20 mA', 'Faults', 'Alarm Voting', 'LIT', 'Network' (highlighted), 'Time/Date', 'Sensor On/Off', 'Calibration', and 'Test'. The main content area is titled 'Network' and includes a 'Summary & Print' icon in the top right. Under the 'Set-up' section, the 'Obtain IP' option is set to 'Manual' (indicated by a blue radio button). Below this, there are input fields for 'IP address' (192, 168, 0, 47), 'Subnet' (255, 255, 255, 0), and 'Default gateway' (192, 168, 0, 1). A 'Hostname' field contains the text 'MIDAS-M'. At the bottom right of the configuration area are two buttons: 'RESET' and 'ACCEPT'.



## Set up the Time and Date

Set the time and date.

On the home page, select **Set-up > Time/Date**.

You can set the Time and Date in a 24 hour format and synchronize it with the computer.

The screenshot shows the Honeywell Midas-M Gas Detector web interface. The left sidebar contains a menu with the following items: Review, Set-up (selected), General, Gas/Alarm, Relays, 4-20 mA, Faults, Alarm Voting, LIT, Network, Time/Date (highlighted), Sensor On/Off, Calibration, and Test. The main content area is titled 'Time/Date' and includes a 'Summary & Print' button. Below the title, there is a 'Set-up' section with a warning: 'Time does not automatically update with regional daylight savings changes.' and a note: 'Time is entered in 24 hour format.' The date is set to Year: 2020, Month: 04, Day: 27. The time is set to Hour: 11, Minute: 15. Under 'Date format', three options are listed: YYYY/MM/DD, DD/MM/YYYY, and MM/DD/YYYY (selected). At the bottom, there are three buttons: 'SYNCHRONIZE WITH COMPUTER', 'CHANGE', and 'RESET'.

Honeywell | Midas-M Gas Detector

Review

**Set-up**

General

Gas/Alarm

Relays

4-20 mA

Faults

Alarm Voting

LIT

Network

**Time/Date**

Sensor On/Off

Calibration

Test

### Time/Date

Summary & Print

**Set-up**

Time does not automatically update with regional daylight savings changes.

Time is entered in 24 hour format.

Year: 2020 / Month: 04 / Day: 27

Hour: 11 : Minute: 15

**Date format**

☐ YYYY/MM/DD

☐ DD/MM/YYYY

☒ MM/DD/YYYY

[SYNCHRONIZE WITH COMPUTER](#) [CHANGE](#) [RESET](#)

## Turn Channels on/OFF

You can turn ON/OFF an individual channel.

On the home page, select **Set-up** > **Sensor On/Off**.

Honeywell | Midas-M Gas Detector

Review

Set-up

General

Gas/Alarm

Relays

4-20 mA

Faults

Alarm Voting

LIT

Network

Time/Date

Sensor On/Off

Calibration

Test

Sensor On/Off

Summary & Print

Set-up

Sensor On/Off configuration

Channel1

☒ On

☐ Off

Channel2

☒ On

☐ Off

Channel3

☒ On

☐ Off

Channel4

☒ On

☐ Off

RESET

ACCEPT


## Zero Calibration

Perform Zero calibration for a specific channel or all at once.

1. On the home page, select **Calibration > Zero Calibration**.
2. Select the channel or channels to zero calibrate, and then click **Start**.

The screenshot shows the Honeywell Midas-M Gas Detector web interface. The top header displays the Honeywell logo and the device name 'Midas-M Gas Detector'. A left sidebar contains a navigation menu with categories: Review, Set-up, Calibration, and Test. Under the 'Calibration' category, several options are listed: Zero Calibration (highlighted with a blue bar), Span Calibration, Flow Calibration, 4-20 mA Calibration, and LIT Calibration. The main content area is titled 'Zero Calibration' and includes a 'Summary & Print' button in the top right corner. Below the title, a section labeled 'Setup for zero calibration' contains the instruction 'Select channel to proceed zero calibrate'. There are five radio button options: Channel1 (selected), Channel2, Channel3, Channel4, and All. A blue 'START' button is located at the bottom right of the main content area.

3. Wait until the gas reading is stable, and then click **Accept**.

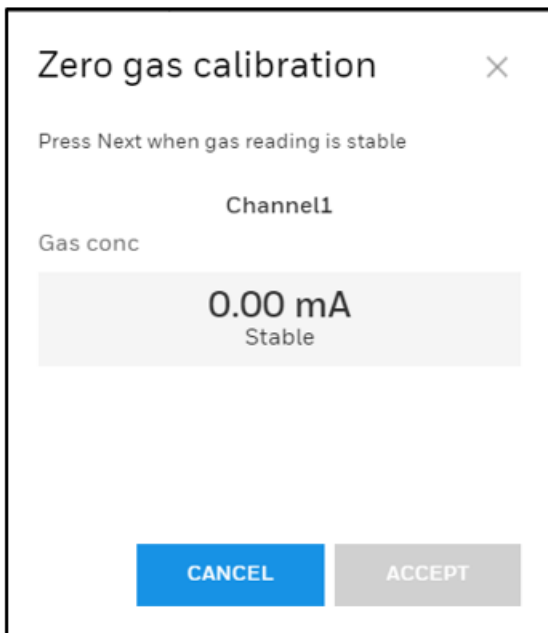

Zero gas calibration


Press Next when gas reading is stable

Channel1

Gas conc

0.00 mA  
Stable

CANCEL ACCEPT

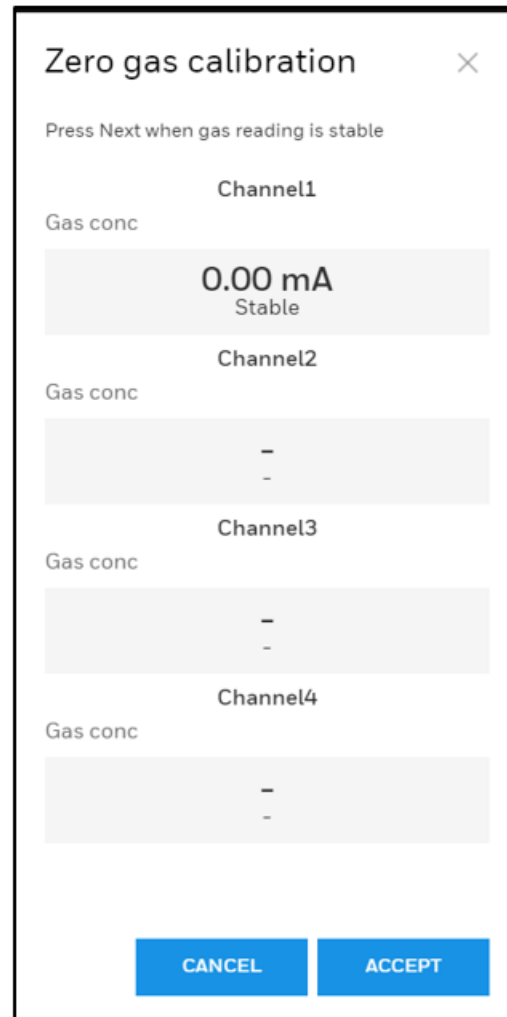

Zero gas calibration

Press Next when gas reading is stable

Channel1

Gas conc

0.00 mA  
Stable

Channel2

Gas conc

-

Channel3

Gas conc

-


Channel4

Gas conc

-

CANCEL ACCEPT

4. On the Result window the status of zero calibration is displayed. Click **Finish**.

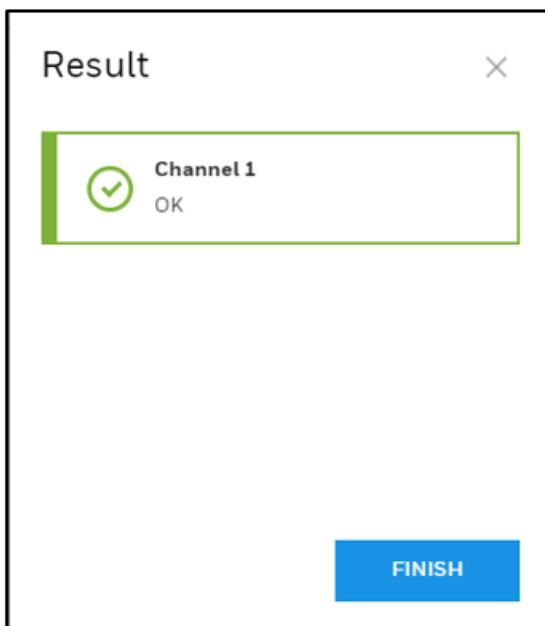


Result

Channel 1  
OK

FINISH

5. In the Inhibit window you have the option to check Inhibit, and then click **Accept**.

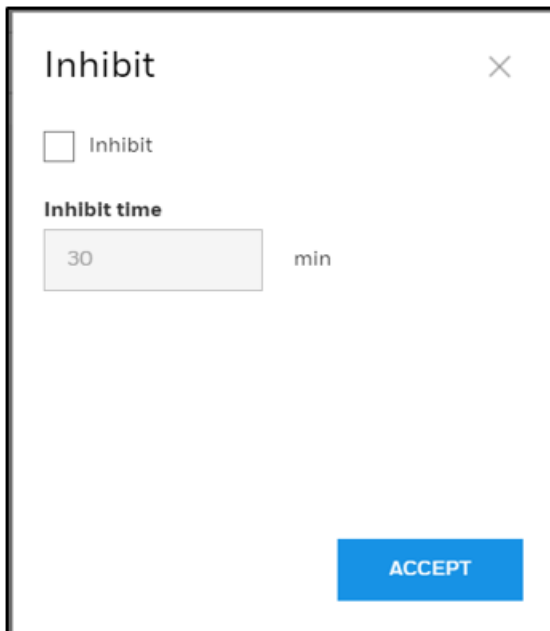

Inhibit

☐ Inhibit

**Inhibit time**

30 min

ACCEPT

## Span Calibration

Perform an span calibration for each channel of the device.

1. On the home page, select **Calibration > Span Calibration**.
2. On the Span calibration page, you can select the gas, the gas type, and the target concentration.
3. Click **Start** and then follow screen instructions.

The screenshot shows the 'Span Calibration' page of the Honeywell Midas-M Gas Detector. The interface has a dark sidebar on the left with a menu containing 'Review', 'Set-up', 'Calibration', 'Zero Calibration', 'Span Calibration' (highlighted), 'Flow Calibration', '4-20 mA Calibration', 'LIT Calibration', and 'Test'. The main content area is titled 'Span Calibration' and includes a 'Summary & Print' button. Below the title, the 'Setup for span calibration' section contains the following fields: 'Select channel to proceed span calibrate' with radio buttons for Channel1 (selected), Channel2, Channel3, and Channel4; 'Select gas' with a dropdown menu showing 'CO'; 'Gas type' with radio buttons for Humidify and Dry (selected); and 'Target concentration' with a text input field showing '50.0' and the unit 'ppm'. A blue 'START' button is located at the bottom right of the form.

## Flow Calibration

Calibrate the amount of gas entering the device.

On the home page, select **Calibration > Flow Calibration**, and then follow screen instructions. You can adjust setpoints, and sync setpoints.

<div><div>Flow Calibration</div><div>Do you want to proceed with flow calibration?</div><div><div>YES</div><div>NO</div></div></div>	<div><div>Adjust setpoint 1</div><div>Setpoint 1 Adjustment by using Increase/Decrease button.</div><div><div>Setpoint 1 target</div><div><div>600</div>cc</div><div><div>^</div><div>v</div></div></div><div><div>Next</div></div></div>
<div><div>Sync setpoint 1</div><div><div>Setpoint 1</div><div><div>600</div>cc</div></div><div><div>Next</div></div></div>	<div><div>Sync setpoint 2</div><div><div>Setpoint 2</div><div><div>700</div>cc</div></div><div><div>Next</div></div></div>

## Calibrate 4-20 mA

Perform a mA calibration for each channel of the device.

1. On the home page, select **Calibration > 4-20mA Calibration**.
2. Select a channel, and then click **Start**.
3. Increase or decrease the mA value, and then click **Next** to Zero calibration (4 mA).

### Adjust zero

×

Zero Adjustment by using Increase/Decrease button.

**Zero target**

4.00

mA

^

∨

Next

4. Increase or decrease the mA value, and then click **Next** to calibrate the span (20mA).

### Adjust span

×

Span Adjustment by using Increase/Decrease button.

**Span target**

20.0

mA

^


∨

FINISH



## Perform a LIT calibration.

1. On the home page, select **Calibration > LIT Calibration**.
2. click Start.

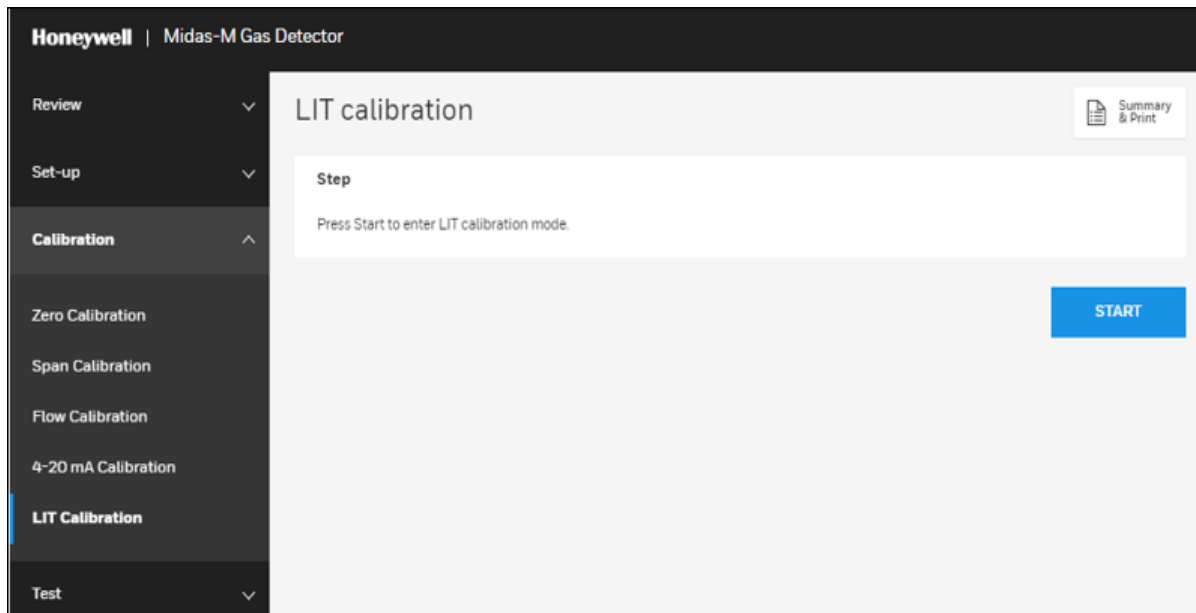

## Perform a Bump Test

Perform a Bump Test on diverse channels.

1. On the home page, select **Test > Bump Test**.
2. Click Enter Bump Test Mode.
3. Optional Step. You can click **Stop Bump Test** to cancel the procedure.

The screenshot shows the Honeywell Midas-M Gas Detector interface. On the left is a dark sidebar menu with options: Review, Set-up, Calibration, Test (expanded), Bump Test (highlighted), Alarm/Fault Simulation, 4-20 mA Test, LIT, and Inhibit. The main display area is titled 'Bump Test' and features a 'Summary & Print' icon in the top right. It displays four channels of data:

Channel 1 CO	Channel 2 NH3	Channel 3 O2	Channel 4 HCl
0.00 ppm	0.00 ppm	20.9 %VOL	0.00 ppm
Flow	Flow	Flow	Flow
616 cc/min	616 cc/min	616 cc/min	616 cc/min

Below the channel displays is a 'Perform test' section with the following text:

The inhibit icon is also displayed indicating that no alarm outputs will be generated during this process. Apply the bump test gas and the display will show the measured gas concentration.

**Note:** Unit must be in normal monitoring mode.

A blue button labeled 'STOP BUMP TEST MODE' is located at the bottom right of the interface.

## Perform an Alarm or Fault Simulation

Simulate function for testing alarm faults.

1. On the home page, select **Test > Alarm/Fault Simulation**.
2. Select a Channel.
3. Select whether the simulation should be on an Alarm or a Instrument fault.
4. Click **Accept**.


The screenshot shows the Honeywell Midas-M Gas Detector interface. On the left is a dark sidebar with a menu: Review, Set-up, Calibration, Test (highlighted), Bump Test, Alarm/Fault Simulation (highlighted with a blue bar), 4-20 mA Test, LIT, and Inhibit. The main panel is titled 'Alarm/Fault Simulation' and contains a 'Perform test' section. A red warning message states: 'Proceeding with Alarm or Fault simulation may cause unexpected alarm activation.' Below this is a 'Channel' dropdown menu currently showing 'Channel1'. Under the 'Simulation' heading, there are five radio button options: 'No simulation' (selected), 'Simulate alarm 1', 'Simulate alarm 2', 'Simulate instrument fault', and 'Simulate maintenance fault'. A blue 'ACCEPT' button is located at the bottom right of the main panel. A 'Summary & Print' icon is in the top right corner of the main panel.

## Perform a 4-20mA test


Test the mA value on a channel.

Note: The 4-20 MA test may cause unexpected alarm activation. Only authorized operators should perform this task.

1. On the home page, select **Test > 4-20 mA Test**.
2. Select a Channel.
3. Click **Accept**.

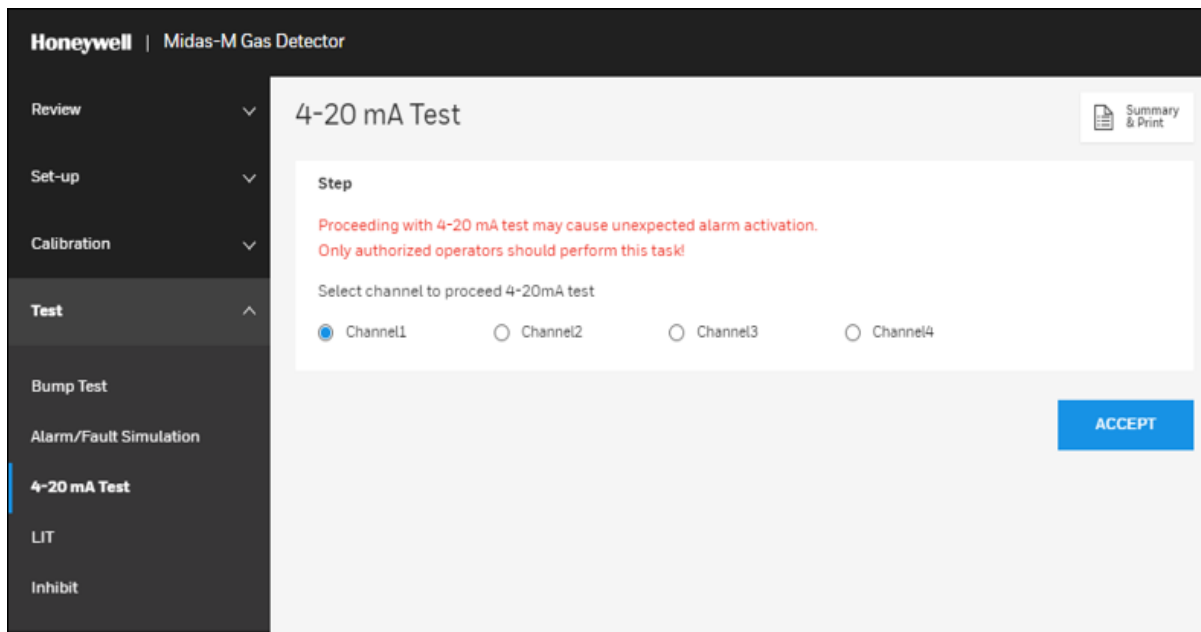


4. Increase or decrease the mA value.
5. Click **Close**.

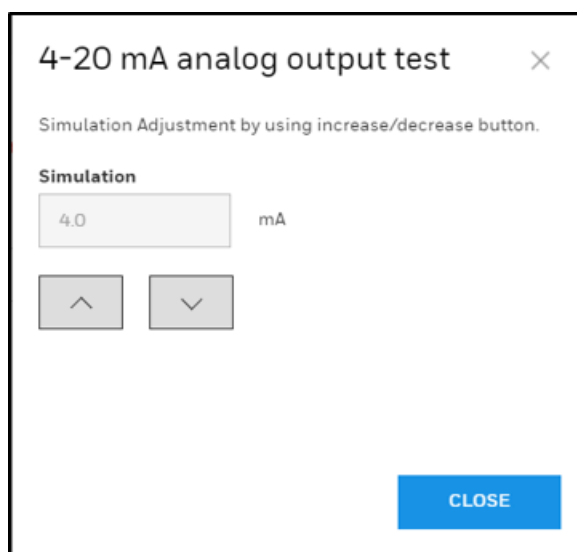

## PERFORM THE LIT

1. On the home page, select **Test > LIT**.
2. Click **Accept**.

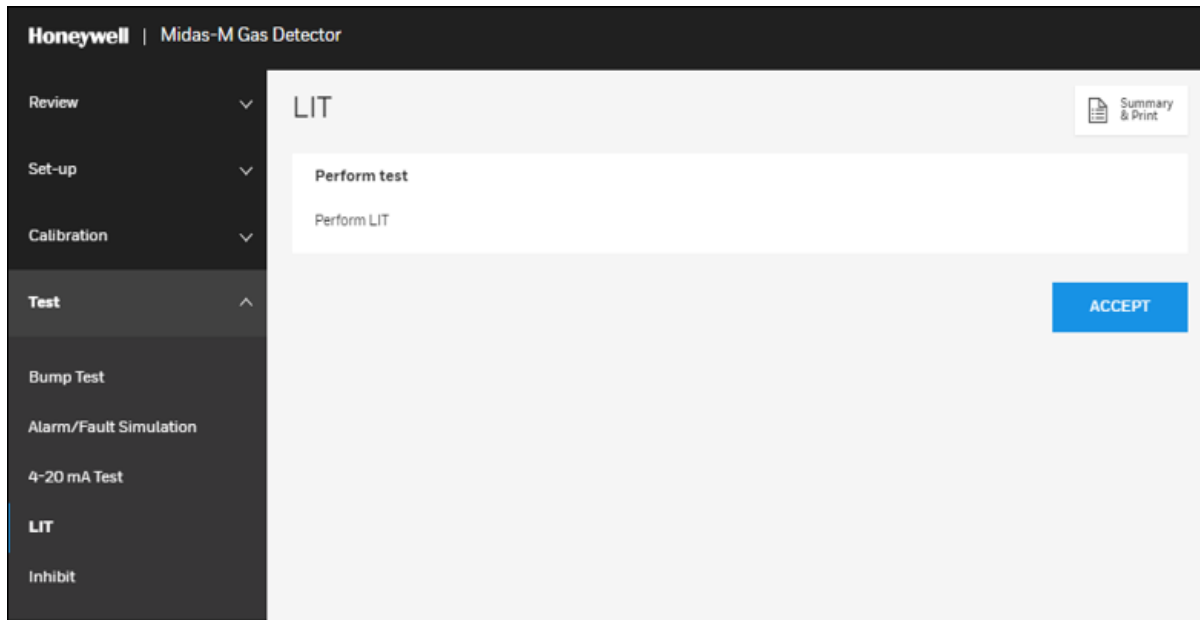

## Perform Inhibit Test

Enable or disable the inhibit state.

1. On the home page, select **Test > Inhibit**.
2. From the **Inhibit level** option, select No inhibit or Inhibit.
3. Select the **Inhibit timeout** in minutes.
4. Click **Accept**.

The screenshot shows the 'Inhibit' configuration screen for a Honeywell Midas-M Gas Detector. The interface has a dark sidebar on the left with a menu containing 'Review', 'Set-up', 'Calibration', 'Test', 'Bump Test', 'Alarm/Fault Simulation', '4-20 mA Test', 'LIT', and 'Inhibit'. The 'Test' menu is expanded, and 'Inhibit' is selected. The main content area is titled 'Inhibit' and includes a 'Summary & Print' button in the top right. Below the title, there is a 'Perform test' section with a red warning message: 'Midas-M continues to monitors gases in this test mode.' The 'Inhibit level' section has two radio button options: 'No inhibit' (selected) and 'Inhibit'. The 'Inhibit timeout' section features a text input field with the value '30' and a 'min' unit label. A blue 'ACCEPT' button is located at the bottom right of the main content area.


# Line Integrity Test Option

Honeywell Analytics offers the optional capability to check for leaks in Midas-M sample lines. Midas-M Transmitter for LIT(Line Integrity Test) detects a pneumatic signal from the valves installed at the end of the sample line. Any leak in the tubing causes a change in the signal and is detected. This test is performed automatically as a LIT. The Line Integrity Test Option requires the Calibration process.

Item Number (Part number)	Description
MMT-L01	Midas-M 4-20mA Transmitter - LIT
MMT-L02	Midas-M TCP/IP Modbus Transmitter - LIT
MMT-LT01	Midas-M 4-20mA Transmitter w/Tube - LIT
MMT-LT02	Midas-M TCP/IP Modbus Transmitter w/Tube - LIT
MMT-LB01	Midas-M 4-20mA Transmitter Bulk (6) - LIT
MMT-LB02	Midas-M TCP/IP Modbus Transmitter Bulk (6) - LIT
MM-LPM	Midas-M Pump Module - LIT
MM-LIT	Midas-M Check Valve - LIT

# Pneumatic Overview

The external tubing ends with a filter and check valve. Check Valve does not permit any flow until a "cracking" pressure of about 0.75inHg is applied. A leak between the Midas-M and Check Valve results in an increase in pressure at the analyzer.

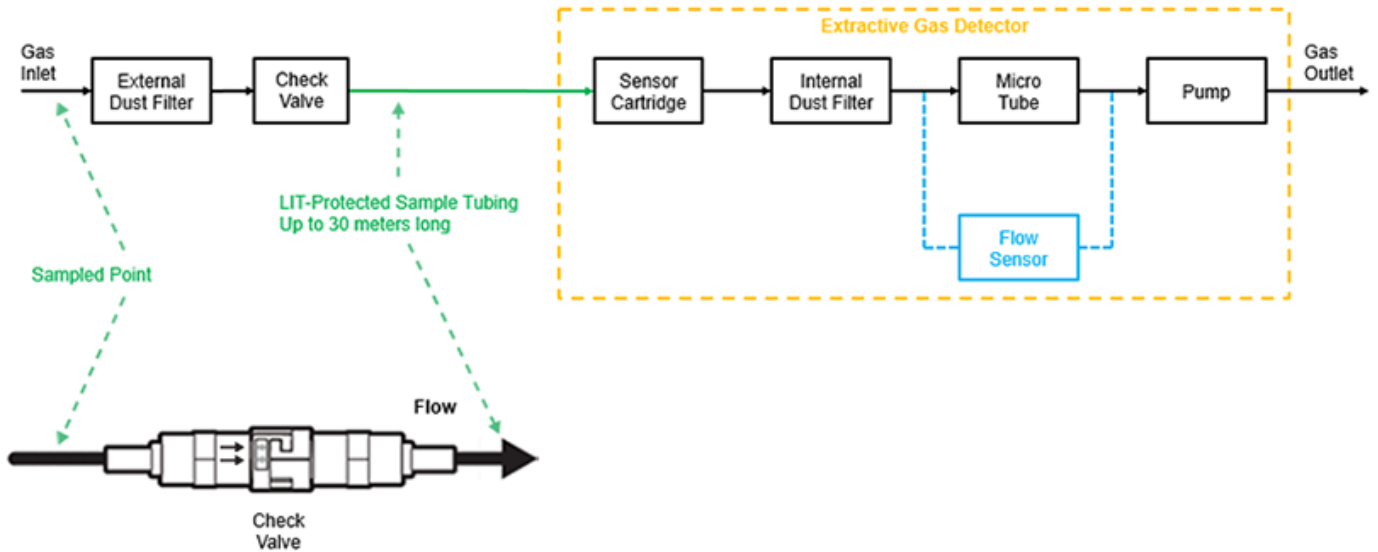

**Simplified Pneumatic Schematic**

Before starting the LIT performance, the Midas-M and the external plumbing must be "Calibrated".

This process involves measuring the sample pressure when the tubes are known to be leak-free and otherwise correct. It is possible to confirm that a tube is leak-free by plugging the end and observing the sample flow decrease.

During the calibration process, the Midas-M records the observed sample pressure. Later, LIT tests issue a fault if the sample pressure increases significantly. Performing the calibration without a leak check invalidates the LIT.

The use of the specified Check Valve is mandatory with Midas-M LIT.

## Note:

In this document, all pressures are in inches of mercury (inHg). May be converted to kilopascals by multiplying by 3.38. Furthermore, and all pressures as gauge pressure, not a vacuum. Using this terminology, the effect of a sample line leak described as a pressure increase instead of a vacuum decrease.



## Quantitative Performance

The sample line must be 3.18 mm ID and have a length of 30 meters or less.

The total gas flow (transport plus sample) is typically 0.6 liters per minute per point. It results in differential pressure of about 0.8inHg with the maximum tubing length. Check Valve increases the differential pressure by an additional 0.75inHg for a total of about 1.55inHg.

The total differential pressure considering system pressure must be lower than 1.84inHg, or a fault is issued affecting the Pump life span.

Leaks of 1mm diameter or more significant cause a sample flow during LIT and generates a fault.

During the Calibration process, the differential pressure must be 0.55inHg or more, or a fault is issued. During LIT testing, if the differential pressure is 0.25inHg lower than the calibration differential pressure, a fault activates.

Leaks of 1 mm [0.039 inches] diameter or larger provoke a substantial decrease in the differential pressure and the generation of a fault.

The correct operation requires that the total pressure variance of the sampled point shall be less than the calibration differential pressure of  $\pm 0.25\text{inHg}$ .

## Software Overview

LIT is performed once a day by default. Automatic LIT is available by setting test terms from 1 hour to 72 hours manually.

In the menu, you can select a LIT Calibration and a manual LIT. By default, the LIT function is disabled.

### Menu Options

MENU	DESCRIPTION
LIT Calibration	Calibration
LIT	Line Integrity Test to be performed immediately

## LIT Related Events

Midas-M is capable of creating one Maintenance fault, "M44."


If the LIT generates Event M44, inspect with high care the integrity of the sample line tubing along its length as the monitored sample may be taken from the break in the tubing, not from the intended area.

Event Number	Event History Description	Data Field	Problem	Possible Cause	Recovery
M44	Sample line leak detected	Pressure (AD) Temperature (Celsius) Fail code	Inadequate cracking pressure and temperature measured during the monitoring by the optional Line Integrity Test	Total Inlet system pressure is over 1.84inHg	Revise installation
				Temperature variation +/- 20°C from Calibration	Perform calibration or disable LIT test
				Inlet system pressure differs from the Calibration by more than 0.25inHg	Perform calibration or disable LIT test
				Sample tubing cut or leaking	Replace tubing
				Check Valve not seating	Replace Check Valve
INFO	LIT Calibration failed	Pressure (AD) Temperature (Celsius)	Inadequate cracking pressure measured during calibration	Check Valve not installed	Install Check Valve or disable LIT test in configuration
				Sample tubing cut or leaking	Replace tubing

# LIT Initial Set-Up






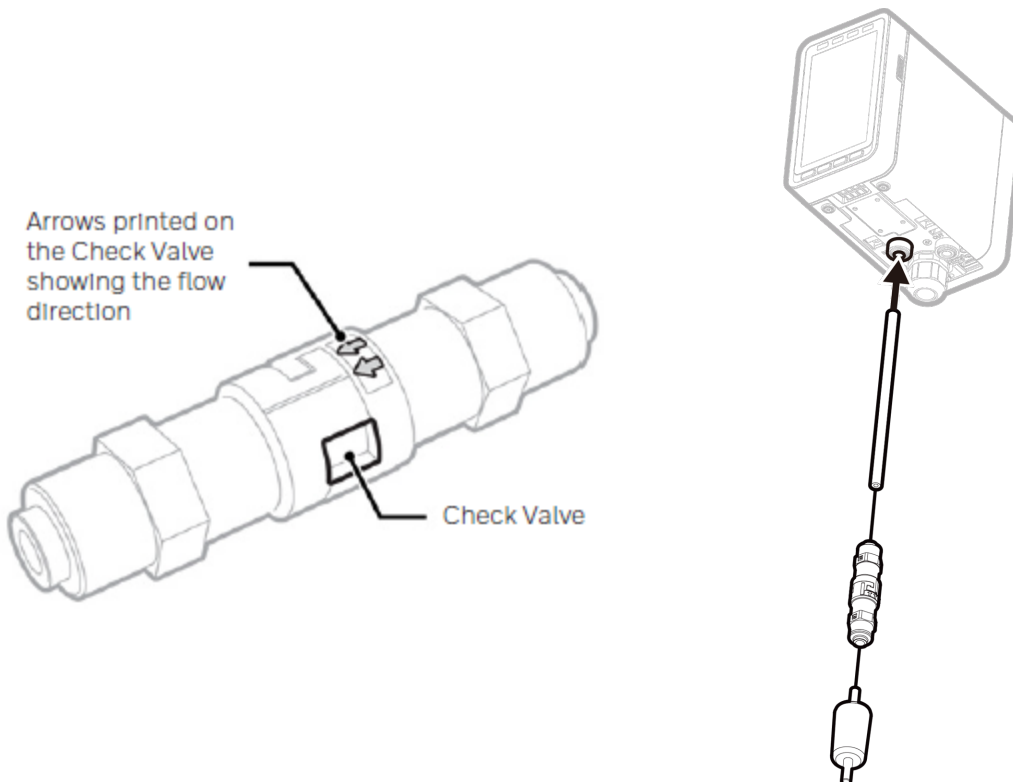



## Install and leak check

1. Install Midas-M Bracket Assembly, Chassis, and Sensor Cartridge to the mounting surface. Refer to the *Midas-M User Manual* for further information.
2. Connect the actual inlet & outlet tubes to Midas-M and turn on the system. Verify the Check-Valve is attached to the Sampled Point. After the start-up routine, the detector displays the normal operating mode. After the Power ON, wait approximately 10 minutes for pump stabilization and corrective measures.












3. Perform a System Leak Check to ensure internal connections are secure. Refer to System Leak Check in the *Midas-M User Manual* for further information.










## LIT function ON

4. Press the  or  buttons for 1 sec to activate the menu, and when **SETUP** is displayed, press the Enter  button to select it.
5. Press  or  until **LIT** is displayed and press  to select it. **LIT ON/OFF** is displayed.
6. Press  or  to switch from **OFF** to **ON**. And select **Test Period** (default is 24 Hour), and then press  to accept and save changes..

## LIT calibration

7. Press  or  button for 2 secs until **SETUP** is displayed.
8. Press  or  locate **CALIBRATION** and press  to select it.
9. Press  or  to locate **LIT** and press  to select it. The **CALIB.START?** message is displayed. Press  to start calibration. Follow on-screen instructions.

## LIT Manual test

10. Press  or  button for 2 secs until **SETUP** is displayed.
11. Press  or  to locate **TEST**. Press  to select it.
12. Press  or  to locate **LIT** and press  to select it. The **LIT START?** message is displayed. Press  to start. Follow on-screen instructions.



## CAUTION

- If you make any changes to the Pump Module, Check Valve, Filter, and Tube, start a new LIT Calibration again.
- Verify the Check Valve flow direction during installation.
- Verify both Check Valve and Tube firmly assembly.
- Mark the insertion from the end of the tube to the length 15.5mm. When inserting the tube, make sure the insertion is up to the marked position.
- The External filter is installed further from the Transmitter and the Check Valve is installed closer to the Transmitter.

# 4 Maintenance

Midas-M is a fully serviceable product designed with modular components that can be readily replaced by trained service personnel so as to minimize the time that the gas detector is not available.

External in-line air filters should be replaced every three months or more frequently if the system is sampling in environments that have high levels of particulate matter or very acidic / wet atmospheres. Similarly, the internal particulate filter should be replaced every two years or more frequently if the sample lines are prone to heavy contamination. Refer to the following table.

Every sensor cartridge is shipped with a 2 years warranty. All sensor cartridges are factory calibrated to traceable national standards before shipment to the end user.

Note that testing or calibrating with the wrong (incorrect, out of date, non-traceable) calibration gases, calibration equipment, methods or operating conditions can actually damage the sensor cartridge's lifetime and alter the calibration adversely. Only qualified calibration technicians should attempt to calibrate the Midas-M gas detector.

The internal pump module is designed to operate for a minimum of 24 months and it is recommended that this pump module (part number MM-PM ) be replaced every 2 years.

Recommended maintenance schedule

Component	Frequency
Pump	2 years or as needed
Internal filter	2 years or as needed
External Sample Line Filter	Part Number 780248, every 3-6 months
	Part Number 1991-0147, every 3-6 months
	Part Number 1830-0055, every 3-6 months
LIT Check Valve	2 years or as needed
Leak Check	Leak Check every 6 months or after replacing any component.
Bump Test	6 months
Flow Calibration	Flow Calibrate after pump, internal and external filter replacement.

See the Gas Table for the correct filter requirement for your application.


#### NOTE

Every sensor cartridge warranty: Typically, two years depending on the sensor type. The Bias battery will last only about six months. After replacement, allow at least a day for the cartridge to reach equilibrium.

## System Leak Check

When performing a leak check, the Midas-M must be placed in Inhibit mode to prevent false concentrations or faults to be activated when plugging the Sample or Exhaust Lines. Example: O<sub>2</sub> (oxygen) – plugging of the ports causes the O<sub>2</sub> levels within the Midas-M flow path to be depleted as the sample becomes stagnant. The result is the concentration levels begin to fall and trigger the alarms for the O<sub>2</sub> depletion.

1. Place the Midas-M into Inhibit.
2. Plug the Inlet Sample line.

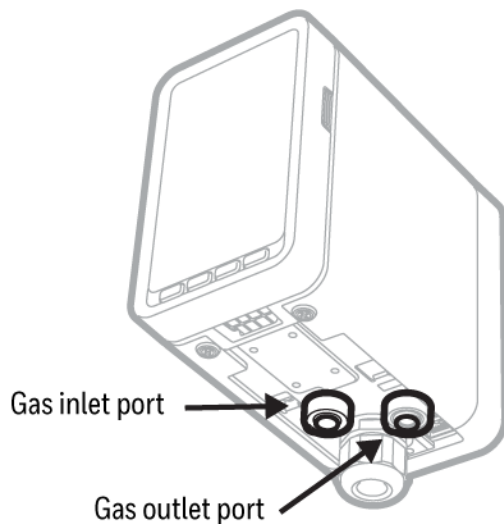

3. The flow meter indicators will begin to drop and ultimately disappear within seconds.
4. Continue to keep the port plugged until the Midas-M reports an “F<sub>41</sub>” (Flow Fail) – approximate time to fault is 24 seconds.
5. Remove the plug.
6. Allow 15 seconds or so to allow the Midas-M flow to stabilize then clear the fault by pressing and holding ‘X’
7. Plug the Outlet Exhaust line.
8. The flow meter indicators will begin to drop and ultimately disappear within seconds.
9. Continue to keep the port plugged until the Midas-M reports an “F<sub>41</sub>” (Flow Fail) – approximate time to fault is 24 seconds.

10. Remove the plug.
11. Allow 15 seconds or so to allow the Midas-M flow and concentrations to stabilize then clear the fault by pressing and holding 'X'
12. Return the unit to the Monitoring Mode.





# 5 Additional Information

Learn from about strategic information related to the Honeywell Midas®-M Detector.

## EU Directive 2012/19/EU: Waste Electrical and Electronic Equipment (WEEE)



This symbol indicates that the product must not be disposed of as general industrial or domestic waste. This product should be disposed of through suitable WEEE disposal facilities. For more information about disposal of this product, contact your local authority, distributor or the manufacturer.

# Troubleshooting and Fault Diagnosis

General troubleshooting guide and specific fault code table for the Midas-M gas detector.

Fault code descriptions

Number	Date	Data Field	Condition	Recovery
M02	Simulated M fault	N/A	User enters simulation mode	Reset simulated fault
M10	Baseline warning	Concentration without Deadband	Cell baseline has drifted.	Check for background gas concentration, temperature, or humidity fluctuations. Perform zero calibration. Replace cell.
M11	Over Range	Peak concentration	Large concentration of gas has been detected. The Midas-M requires an independent confirmation that the gas hazard is gone.	Supply clean air to the Midas-M and clear the fault.
M20	Calibration expired	Days until fault	The user-specified calibration interval has elapsed.	Perform zero and span calibrations. Increase span calibration period. (zero days = disabled)
M21	Cell expires soon	Days until fault	Cell is old and will expire soon.	Replace the cartridge or the cell with a new.
M40	Temperature Near Limit	Temperature (C)	Temperature is within 5 C of limit.	Check installation environment.
M41	Flow Low	Flow (cc/min)	Midas-M is no longer able to regulate the flow.	Check filters and pump.

Number	Date	Data Field	Condition	Recovery
M44	LIT fail	Sub fault code	LIT check fail	Check a flow path
F01	LED indicator error	N/A	LED indicator has no response.	Replace the LCD
F02	Simulated F Fault	N/A	User enters simulation mode	Reset simulated fault
F10	Baseline Fault	Concentration without Deadband	Cell baseline has drifted.	Check for background gas concentration, temperature or humidity fluctuations. Perform zero calibration. Replace cell.
F20	Calibration Expired too long.	N/A	Too long since last calibration.	Replace or calibrate the Cell.
F21	Cell expired.	N/A	Cell is too old.	Replace the cartridge or cell.
F40	Temperature Limits Exceeded	Temperature (C)	Temperature is out of limit.	Check installation environment.
F41	Flow Fail	Flow (cc/min)	Flow < 70% of nominal for 24 seconds	Check filters and pump.
F42	Pump Memory error	N/A	Pump memory has no response or corrupted data	Reboot
F43	Pump absent	N/A	There is no pump	Device Power off and then insert the pump
F50	Cell Failure	N/A	Reflex test fail of toxic cell	Replace cell
F51	Cell comm. Failure	N/A	It has failed to communicate with IR cell	Replace IR cell

Number	Date	Data Field	Condition	Recovery
F52	Cell memory error	N/A	Cell memory has no response or corrupted data	Replace cell
F53	Cell Memory Invalid	N/A	Checksum error.	Replace cell
F54	Cell IR voltage error	N/A	Cell IR voltage is out of range	Replace cell
F60	The absent cartridge	N/A	No communications.	Reset cartridge. Replace cartridge.
F61	Cartridge wrong type	Cell ID	Cartridge has one or more empty channel	Replace cartridge.
F62	No valid cell	N/A	Cartridge has no valid cell	Replace cartridge.
F63	Cartridge Memory Invalid	N/A	Checksum error.	Reboot
F64	Cartridge app Memory Invalid	N/A	Checksum error.	Replace cartridge.
F65	Cartridge 3.3V error	Voltage	Cartridge 3.3V is out of range	Replace cartridge.
F66	Cartridge 5V error	Voltage	Cartridge 5V is out of range	Replace cartridge.
F67	Cartridge app failed	N/A	Cannot start cartridge app	Update the latest cartridge app
F80	Transmitter NOR flash error	N/A	No communication	Replace the transmitter
F81	Transmitter memory invalid	N/A	Checksum error.	Reboot
F82	Transmitter memory comm. Error	N/A	Communication failed	Reboot
F83	Transmitter app memory invalid	N/A	Checksum error.	Replace transmitter or

Number	Date	Data Field	Condition	Recovery
				update the latest version
F84	Transmitter 3.3V error	Voltage	Transmitter 3.3V is out of range	Replace Transmitter
F85	Transmitter 24V error	Voltage	Transmitter 24V is out of range	Replace Transmitter
F86	Transmitter 5V error	Voltage	Transmitter 5V is out of range	Replace Transmitter
F87	LIT pump error	N/A	LIT pump communication failed	Replace LIT pump

# Specifications

Specifications	
<b>Transmitter Dimension</b>	
Size (unit with Cartridge)	"136 mm (H) X 83 mm (W) X 152 mm (D) (5.35 X 3.27 X 5.98 in)"
Weight - Transmitter	1.3 kg (2.87 lb)
Weight - Cartridge	0.17 ~ 0.22 kg (0.38 ~ 0.49 lb) dependent on sensor type
<b>Optional Relay Dimension</b>	
Size	"137 mm (H) X 84 mm (W) X 41 mm (D) (5.39 X 3.31 X 1.61 in)"
Weight	0.31 kg (0.68 lb)
<b>Power Requirements</b>	
Operating Voltage	24 VDC Nominal, -15 to +10% (20.4 to 26.4 VDC)
"Operating Voltage with Power over Ethernet (PoE)"	48 VDC PoE (IEEE 802.3af compliant)
<b>Power Consumption</b>	
Transmitter unit (normal condition) <sup>1</sup>	Typ. 5W
Transmitter unit (full load condition) <sup>2</sup>	≤ 11.45W
Transmitter with Optional Relay	≤ 12.9 W
<b>Outputs</b>	
Visuals	"Alarm, power, fault LEDs, and LCD with all the gas readings and events. LEDs: Power (Green), Alarm 1 (Red), Alarm 2 (Red), Fault (Yellow)"
Relays in Transmitter	"Alarm1, Alarm2, Fault Relays (3) rated 1.0 A @ 30Vdc or 0.5A @ 125Vac Max 10uA @ 10mV minimum, configurable as normally open or closed, latched or unlatched"

Specifications	
Relays in Optional Relay	"8 relays for Alarm1 and Alarm2 of each channel and a relay for common fault rated 1.0 A @ 30Vdc or 0.5 A @ 125 Vac Max 10uA @ 10mV minimum, configurable as normally open or closed, latched or unlatched"
Analog	3 wire sink, 3 wire source, or 4 wire fully isolated; 0 to 21 mA for each channel
Digital Communications	Modbus / TCP Ethernet / Power over Ethernet (PoE)
Certification and Specification	
	"CE marked Meets EN 50270:2015+AC:2016 and EN61000-6-4:2007+A1 ETL approved UL 61010-1:2012 Ed.3 IEEE 802.3af-2003". UKCA Marked for sale in the United Kingdom.
Performance	
	Refer to Individual sensor datasheets
Transport System	
Flow Rate	600 mL/min
Transport Time	2 to 25 seconds maximum
Sample Line Tubing	3.18 mm ID X 6.35 mm OD (0.125 X 0.25 in)
Tubing Length	Up to 30 m (100 ft) with FEP tubing
Exhaust Line Tubing	4.76 mm ID X 6.35 mm OD (0.188 X 0.25 in)
Exhaust Length	Up to 30 m (100 ft)
Ambient Point	In line air filter required
Operating Temperature	
	0°C to +40°C (32°F to 104°F)
Wiring Requirement	
4-20mA	2 wire, 14 AWG maximum
Digital	CAT5 Cable or equivalent: RJ45 connector
Gas Concentration Display and Interface	
Instrument	"4-digit alphanumeric display with separate units, concentration bar graph for each channel and other icon driven indicators 4 button interface keypad"

Specifications	
Remote	Internet browser access via Ethernet
<b>Installation Details</b>	
Mounting	Wall mounted using pre-drilled holes on chassis. Options for DIN rail.
Material	"Cover: Plastic (Polycarbonate) Chassis/Mounting Bracket: Zinc plated steel Red frame : Liquid coated Aluminum "
<b>Warranty</b>	
Transmitter unit	1 year
Sensor cartridge	2 years

<sup>1</sup> Normal condition: (1) No gas alarm, (2) Without tube and pressure/vacuum

<sup>2</sup> Full load condition: (1) All 4 channels gas alarm are on, (2) Maximum tubing length and pressure/vacuum on the inlet/exhaust line




# Ordering

This section contains details of how to order complete Midas-M detector and sensor cartridge kits, separate transmitters and sensor cartridges as well as spares and accessories.

## Transmitter

Part Number	Description
MMT-01	Midas-M 4-20mA Extractive Transmitter
MMT-02	Midas-M TCP/IP Modbus Extractive Transmitter
MMT-T01	Midas-M 4-20mA Extractive Transmitter with Tube
MMT-T02	Midas-M TCP/IP Modbus Extractive Transmitter with Tube
MMT-B01	Midas-M 4-20mA Extractive Transmitter Bulk Package (6pcs)
MMT-B02	Midas-M TCP/IP Modbus Extractive Transmitter Bulk Package (6pcs)
MMT-L01	Midas-M 4-20mA Extractive Transmitter – LIT
MMT-L02	Midas-M TCP/IP Modbus Extractive Transmitter – LIT
MMT-L01T	Midas-M 4-20mA Extractive Transmitter with Tube – LIT
MMT-L02T	Midas-M TCP/IP Modbus Extractive Transmitter with Tube – LIT
MMT-L01B	Midas-M 4-20mA Extractive Transmitter Bulk Package (6pcs) – LIT
MMT-L02B	Midas-M TCP/IP Modbus Extractive Transmitter Bulk Package (6pcs) – LIT

# Cartridge

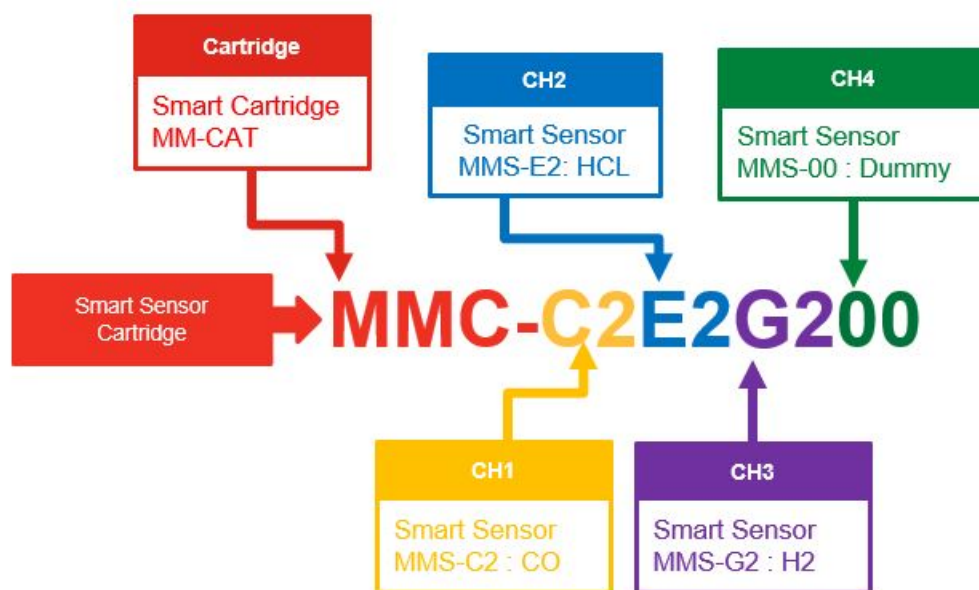

- Need to sort A to Z for smart sensor configuration alphabetically.

Part Number	Description
MMC-xxxxxxx	Midas-M Sensor Cartridge with Smart Sensors

Smart Sensor	Code
Dummy	0
Hydrogen Chloride (HCl) 0 - 8ppm, 2 years	E2
Silane (SiH4) 0 -20 ppm, 2 years	X2
Hydrogen (H2) 0 - 1000ppm, 2 years	G2
Chlorine (Cl2) 0 - 2ppm, 2 years	L2
Ammonia (NH3) 0 - 100ppm, 2 years	A2
Carbon Monoxide (CO) 0 - 100ppm, 2 years	C2
Phosphine (PH3) 0 - 1200ppb, 2 years	R2
Ozone (O3) 0 - 0.4ppm, 2 years	U2
Oxygen (O2) 0 - 25%v/v, 3 years	D2
Sulphur Dioxide (SO2) 0 - 8ppm, 2 years	S2

Hydrogen Fluoride (HF) 0 - 12ppm, 2 years	Z2
Hydrogen Sulfide (H <sub>2</sub> S) 0 – 40ppm, 2 years	H4
Nitrogen Dioxide (NO <sub>2</sub> ) 0 – 12ppm, 2 years	VN
Ethylene Oxide ((ETO, C <sub>2</sub> H <sub>4</sub> O) 0- 40ppm, 2 years	ET

## Smart Sensor

Smart sensor	Code
MMS-00	Midas-M Dummy Sensor
MMS-E2	Midas-M Hydrogen Chloride (HCl) 0 – 8 ppm, 2 years
MMS-X2	Midas-M Silane (SiH <sub>4</sub> ) 0 -20 ppm, 2 years
MMS-G2	Midas-M Hydrogen (H <sub>2</sub> ) 0 - 1000ppm, 2 year
MMS-L2	Midas-M Chlorine (Cl <sub>2</sub> ) 0 - 2ppm, 2 years
MMS-A2	Midas-M Ammonia (NH <sub>3</sub> ) 0 - 100ppm, 2 yea
MMS-C2	Midas-M Carbon Monoxide (CO) 0 - 100ppm, 2 years
MMS-R2	Midas-M Phosphine (PH <sub>3</sub> ) 0 - 1200ppb, 2 years
MMS-U2	Midas-M Ozone (O <sub>3</sub> ) 0 - 0.4ppm, 2 years
MMS-D2	Midas-M Oxygen (O <sub>2</sub> ) 0 - 25%v/v, 3 years
MMS-S2	Midas-M Sulphur Dioxide (SO <sub>2</sub> ) 0 - 8ppm, 2 years
MMS-Z2	Midas-M Hydrogen Fluoride (HF) 0 - 12ppm, 2 years
MMS-H4	Midas-M Hydrogen Sulfide (H <sub>2</sub> S) 0 - 40ppm, 2 years
MMS-ET	Midas-M Ethylene Oxide, ETO (C <sub>2</sub> H <sub>4</sub> O) 0 - 40ppm, 2 years
MMS-VN	Midas-M Nitrogen Dioxide (NO <sub>2</sub> ) 0 -12 ppm, 2 years

## Accessories

Modules / Replacements	
Part number	Description
MM-REL	Midas-M Relay Module
MM-PM	Midas-M Pump Module
MM-FIL	Midas-M Filter Module
MM-FRT	Midas-M Front Module
MM-B01	Midas-M 4-20mA Base Module
MM-B02	Midas-M TCP/IP Base Module
MM-M01	Midas-M 4-20mA Main Module

MM-M02	Midas-M TCP/IP Main Module
MM-CAT	Midas-M Cartridge wo Smart Sensors
MM-LPM	Midas-M Pump Module - LIT
MM-LIT	Midas-M Check Valve – LIT

Mounting Accessories	
Part number	Description
MIDAS-A-036	MIDAS DIN Rail Mounting Kit
0235-0128	Flexible Conduit 21" - length
0235-0163	Flexible Conduit 27" - length
MVIP3632-2A	2A 24VDC power supply in vented NEMA 4 enclosure
MVIP3632-5A	5A 24VDC power supply in vented NEMA 4 enclosure

Duct Sampling Adaptors	
Part number	Description
1283K1090	Duct Adapter for 1/4" O.D. tubing for 4-16" round ducts
0235-0095	Union Fitting 1/4" tube, polypropylene

Tubing and External Sample Line Filters	
Part number	Description
780248	End of Line Particulate Filter, Disposable
1991-0147	End of Line Particulate Filter for Corrosive Gases, Disposable This disposable filter provides protection against particulate build up in the sample line when monitoring for Corrosive Gases.
0235-0095	Union Fitting - Use to connect disposable filter to end of line
1830-0055	End of Line Particulate Filter for Corrosive Gases, Reusable This reusable filter housing provides protection against particulate build up in the sample line when monitoring for Corrosive Gases. Replaceable filter element (P/N 0235-1072) purchased separately
0235-1072	Replacement "Corrosive" Filter Elements (pk 100) For use in 1830-0055 filter housing

102599	Tubing Teflon® FEP 1/4" OD x 1/8" ID (Sample inlet) (Price per Foot)
1991-0136	Tubing Teflon® FEP 1/4" OD x 1/8" ID (Sample Inlet) (100' continuous length)
100440	Tubing Polypropylene 1/4" OD X 3/16" ID (Exhaust) (Price per Foot)
1991-0137	Tubing Polypropylene 1/4" OD X 3/16" ID (Exhaust) (100' continuous length)

Gas Table

Gas Name	Formula	Range	Res- olution	Defaul- t Alarm 1	Defaul- t Alarm 2	Sensor Part Num- ber	Max- imum Sensor Warm-up Time (minutes)	Flow Rate (cc/mi- n)	Calibration				Bump Test			Recom- mended Max- imum Sample Line Length (m)	End of line fil- ter	LIT Applic- ation
									Cal- ibration Gas	Conc.	Out- put Equiv. (ppm)	Exp Time (sec)	Recom- mended Bump Test Gas	Conc (ppm)	Max Time (sec)			
Hydrogen Chloride	HCl	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS-E2	20	600	HCl	4	4	300	HCl	4-6	180	5 <sup>1</sup>	1991-0147	Possible
Boron Trichloride	BCl3	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS-E2	20	600	HCl	4	4	300	HCl	4-6	180	5 <sup>1</sup>	1991-0147	Possible
Dichlorosilane	SiH2Cl2	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS-E2	20	600	HCl	4	4	300	HCl	4-6	180	5 <sup>1</sup>	1991-0147	Possible
Hydrogen Bromide	HBr	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS-E2	20	600	HCl	4	4.5	300	HCl	4-6	180	5 <sup>1</sup>	1991-0147	Possible
Silane	SiH4	0 - 20 ppm	0.01 ppm	2.5 ppm	5 ppm	MMS-X2	20	600	SiH4	10	10	300	SiH4	10	180	30	"780248, 1991-0147 or 1830-0055""780248, 1991-0147 or 1830-0055"	Possible
Disilane	Si2H6	0 - 20 ppm	0.05 ppm	1 ppm	2 ppm	MMS-E2	20	600	SiH4	4	4	300	SiH4	10	180	10	"780248, 1991-0147 or 1830-0055"	Possible
Hydrogen (ppm)	H2	0 - 1000 ppm	5 ppm	125 ppm	250 ppm	MMS-G2	10	600	H2	500	500	300	H2	500	180	30	"780248, 1991-0147 or 1830-0055"	Possible
Chlorine	Cl2	0 - 2 ppm	0.01 ppm	0.25 ppm	0.5 ppm	MMS-L2	10	600	Cl2	1	1	300	Cl2	1	180	10	1991-0147 or 1830-0055	Possible
Ammonia	NH3	0 - 100 ppm	0.5 ppm	12.5 ppm	25 ppm	MMS-A2	10	600	NH3	50	50	300	NH3	50	180	10	"780248, 1991-0147 or 1830-0055"	Possible
Carbon Monoxide	CO	0 - 100 ppm	0.5 ppm	12.5 ppm	25 ppm	MMS-C2	10	600	CO	50	50	300	CO	50	180	30	"780248, 1991-0147 or 1830-0055"	Possible
Phosphine	PH3	0 - 1200 ppb	5 ppb	150 ppb	300 ppb	MMS-R2	20	600	PH3	600 ppb	600 ppb	300	PH3	600	180	30	"780248, 1991-0147 or 1830-0055"	Possible
Ozone	O3	0 - 0.4 ppm	0.002 ppm	0.05 ppm	0.1 ppm	MMS-U2	10	600	O3	0.2	0.2	300	NO2 <sup>2</sup>	1	180	5	1830-0055	Not recommended
Oxygen Proficiency &	O2	0 - 25 %vol	0.1 %vol	23.5 %vol	19.5 %vol	MMS-D2	30	600	O2	Air	20.9 %vol	300	O2	Air	180	30	"780248, 1991-0147 or	Possible

Gas Name	Formula	Range	Res- olution	Defaul- t Alarm 1	Defaul- t Alarm 2	Sensor Part Num- ber	Max- imum Sensor Warm-up Time (minutes)	Flow Rate (cc/mi- n)	Calibration				Bump Test			Recom- mended Max- imum Sample Line Length (m)	End of line fil- ter	LIT Applic- ation
									Cal- ibration Gas	Conc.	Out- put Equiv. (ppm)	Exp Time (sec)	Recom- mended Bump Test Gas	Conc (ppm)	Max Time (sec)			
Deficiency																	1830-0055"	
Sulfur Dioxide	SO2	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS- S2	10	600	SO2	4	4	300	SO2	4	180	30	1991-0147 or 1830-0055	Possible
Hydrogen Fluoride	HF	0 - 12 ppm	0.05 ppm	1.5 ppm	3 pmm	MMS- Z2	20	600	HF	6	6	300	Cl2	10	180	5 <sup>1</sup>	1991-0147 or 1830-0055	Possible
Boron Trifluoride	BF3	0 - 8 ppm	0.05 ppm	1 ppm	2 ppm	MMS- Z2	20	600	HF	4	5.2	300	Cl2	5	180	5 <sup>1</sup>	1991-0147 or 1830-0055	Possible
Tungsten Hexafluoride	WF6	0 - 12 ppm	0.05 ppm	1.5 ppm	3 ppm	MMS- Z2	20	600	HF	6	6	300	Cl2	10	180	5 <sup>1</sup>	1991-0147 or 1830-0055	Possible
Hydrogen Sulfide	H2S	0 - 40 ppm	0.2 ppm	5 ppm	10 ppm	MMS- H4	10	600	H2S	20	20	300	H2S	20	180	30	780248, 1991-0147 or 1830-0055	Possible
Ethylene Oxide(ETO)	C2H4O	0 - 40 ppm	0.2 ppm	5 ppm	10 ppm	MMS- ET	10	600	C2H4O	20	20	300	C2H4O	20	180	30	780248, 1991-0147 or 1830-0055	Possible
TEOS	SiC8H20O 4	0 - 40 ppm	0.2 ppm	5 ppm	10 ppm	MMS- ET	10	600	C2H4O	20	20	300	C2H4O	20	180	30	780248, 1991-0147 or 1830-0055	Possible
Nitrogen Dioxide	NO2	0 - 12 ppm	0.05 ppm	1.5 ppm	3 ppm	MMS- VN	10	600	NO2	6	6	300	NO2	6	180	30	780248, 1991-0147 or 1830-0055	Possible
	<sup>1</sup> Recommended to keep the sample lines as short as possible where the RH condition at the sample point is high (above %50 RH); there will be some sample loss due to absorption onto the sample line. <sup>2</sup> An ozone generator can be used instead of 1 ppm NO2.																	

**Bump Testing Notes:**

As an alternative, the actual target gas can always be used instead of a cross-sensitive gas.

Higher concentrations than the recommended ones can be used if necessary, but extra time may be needed for the reading to recover to zero.

**IMPORTANT:** this should only be done once to avoid the danger of poisoning the sensor.

# Combination Index

	HCl (MM S-E2)	SiH4 (MM S-X2)	H2 (MM S-G2)	Cl2 (MM S-L2)	NH3 (MM S-A2)	CO (MM S-C2)	PH3 (MM S-R2)	O3 (MM S-U2)	O2 (MM S-D2)	SO2 (MM S-S2)	HF H (MM S-Z2)	H2S (MM S-H4)	ETO (MM S-ET)	NO2 (MM S-VN)
HCl (MM S-E2)					NO									
SiH4 (MM S-X2)														
H2 (MM S-G2)														
Cl2 (MM S-L2)					NO									
NH3 (MM S-A2)	NO			NO							NO			
CO (MM S-C2)														
PH3 (MM S-R2)														
O3 (MM S-U2)										NO				
O2 (MM S-D2)														
SO2 (MM S-S2)								NO						
HF H (MM S-Z2)					NO									
H2S (MM S-H4)														



ETO (MM S-ET)														
NO2 (MM S- VN)														

# Reflex

Midas-M uses patented Honeywell Analytics technology to continuously monitor the health check status of specific electrochemical cells and alert the user if a cell enters a variety of fault conditions (such as open or short circuit etc.) which would leave the cell unable to detect gas and raise an appropriate alarm signal.

REFLEX® overcomes this unseen failure mode by applying periodically a special electronic pulse to the cell and reviewing the 'echo' from the cell as it responds to the applied signal. If the cell is deteriorating within certain pre-set limits based on the received signals then Midas-M will decrease the REFLEX sampling interval in order to establish the actual viability of the cell. Within a relatively short time, Midas-M will be able to alert the user via fault codes that the electrochemical cell is likely to be requiring replacement and is possibly unable to correctly detect gas.

REFLEX is not required for pellistors, IR, oxygen electrochemical cell or bias electrochemical cell as these sensor cartridges provide alternative electronic means to indicate open circuits and other sensor cartridge damage issues.

# A Modbus/TCP Interface

The Midas-M gas detector can report concentration information in a variety of formats including relay contact closure, an analog 4-20 mA loop, Ethernet/ IP/HTML web pages and via the Modbus/TCP networking protocol. This section defines the format of data in Modbus/TCP registers. More information about Modbus/TCP can be obtained from [www.modbus.org](http://www.modbus.org).

The Midas-M is a Modbus/TCP “server” as defined in the MODBUS Application Protocol Specification V1.0 . It supports command 03 (“read holding registers”) for registers 40001 to 40122 as listed in the following table.

The Midas-M reports floating-point concentration numbers in little-endian or Intel format. This is scaled in units of ppm for gasses which have display units of ppm or ppb. For other display units the concentration is scaled directly in display units. This applies to registers Gas Concentration and Alarm Threshold.

The Midas-M fills 122 Modbus/TCP holding registers as listed in Table 1. The Monitoring Status register is a concise summary of Midas-M status. The other registers provide more complete information.

## Midas-M Modbus Register Map

Midas-M Modbus Register Map : Register 40001 is mapped with base address (zero)

(If channel is disabled, channel information is 0).

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
Holding Register						
Device Status						
40001	Reserved for future expansion	R		2		

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40002	Monitoring Status	R	u16	2		bit 0 : Warmup bit 1 : Inhibit Mode bit 2 : Alarm/Fault simulation bit 3 : 4-20mA calibration mode bit 4 : 4-20mA test mode bit 5 : Flow calibration mode bit 6 : LIT / LIT calibration mode bit 7 : LIT Enabled bit 8 : Gas calibration mode bit 9 : Gas bump test mode bit 10 : Alarm bit 11 : Fault bit 12 ~ 15 : for future expansion
40003	Alarm State	R	u16	2		bit 0 : Ch1 Alarm 1 active bit 1 : Ch1 Alarm 2 active bit 2 : Ch2 Alarm 1 active bit 3 : Ch2 Alarm 2 active bit 4 : Ch3 Alarm 1 active bit 5 : Ch3 Alarm 2 active bit 6 : Ch4 Alarm 1 active bit 7 : Ch4 Alarm 2 active bit 8~15 : for future expansion
40004	Fault State	R	u16	2		bit 0 : Ch1 fault active bit 1 : Ch2 fault active bit 2 : Ch3 fault active bit 3 : Ch4 fault active bit 4 : Device fault active bit 5~15 : for future expansion
40005	Top Fault	R	u16	2	Number of most important active fault	

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40006	Channel Enabled State	R	u16	2	This is the bit representation information of channel enabled. If dummy cell is attached or channel is disabled bit value is set.	bit 0 : Ch1 Dummy cell bit 1 : Ch1 Disabled bit 2 : Ch1 Reserved for further expansion bit 3 : Ch2 Dummy cell bit 4 : Ch2 Disabled bit 5 : Ch2 Reserved for further expansion bit 6 : Ch3 Dummy cell bit 7 : Ch3 Disabled bit 8 : Ch3 Reserved for further expansion bit 9 : Ch4 Dummy cell bit 10 : Ch4 Disabled bit 11 : Ch4 Reserved for further expansion bit 12~15 : for future expansion
40007 to 40008	Gas Concentration Ch1	R	f32	4	Value in float	
40009 to 40010	Gas Concentration Ch2	R	f32	4	Value in float	
40011 to 40012	Gas Concentration Ch3	R	f32	4	Value in float	
40013 to 40014	Gas Concentration Ch4	R	f32	4	Value in float	
40015 to 40016	Gas Concentration Ch1	R	u32	4	Value in fixed point	Conversion equation: ppm value = Value * 1/10 DECP
40017 to 40018	Gas Concentration Ch2	R	u32	4	Value in fixed point	Conversion equation: ppm value = Value * 1/10 DECP
40019 to 40020	Gas Concentration Ch3	R	u32	4	Value in fixed point	Conversion equation: ppm value = Value * 1/10 DECP
40021 to 40022	Gas Concentration Ch4	R	u32	4	Value in fixed point	Conversion equation: ppm value = Value * 1/10 DECP

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40023	Decimal Point Indicator	R	u16	2	Decimal point indicator of Display Gas Concentration	bit 0 ~ 2 : Ch1 Decimal point indicator (0, 1, 2, 3) bit 3 ~ 5 : Ch2 Decimal point indicator (0, 1, 2, 3) bit 6 ~ 8 : Ch3 Decimal point indicator (0, 1, 2, 3) bit 9 ~ 11 : Ch4 Decimal point indicator (0, 1, 2, 3) bit 12~15 : for future expansion
40024	Heat beat Counter	R	u16	2	System time in seconds. Range of this value is from 0 to 59	
40025 to 40026	Device Maintenance Fault	R	u32	4	This is the bit order representation of the maintenance fault status. If any fault exists this will take a value in each bit. if any maintenance fault exists, this will take a value zero. The meaning of bit will be described as fault code in more detail	bit 0 : Simulated Maintenance Fault (m02) bit 1 : Flow Warning (m41) bit 2 : LIT Fail (m44) bit 3~31 : for future expansion

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40027 to 40028	Device Instrument Fault	R	u32	4	This is the bit order representation of the instrument fault status. If any fault exists this will take a value in each bit. if any instrument fault exists, this will take a value zero. The meaning of bit will be described as fault code in more detail	bit 0 : LCD Fault (F01) bit 1 : Simulated Instrument Fault (F02) bit 2 : Reserved for future expansion bit 3 : Flow Fail (F41) bit 4 : Pump EEPROM (F42) bit 5 : Pump Absent (F43) bit 6 : Reserved for future expansion bit 7 : Cartridge Absent (F60) bit 8 : Catridge Wrong Type (F61) bit 9 : Cartridge No valid cell (F62) bit 10 : Catridge EEPROM (F63) bit 11 : Catridge Flash (F64) bit 12 : Catridge Power 3.3v (F65) bit 13 : Catridge Power 5v (F66) bit 14 : Catridge Application Fail (F67) bit 15 : Transmitter Nor Flash (F80) bit 16 : Transmitter EEPROM Corrupted (F81) bit 17 : Transmitter EEPROM Com Fail (F82) bit 18 : Transmitter Flash (F83) bit 19 : Transmitter Power 3.3v (F84) bit 20 : Transmitter Power 24v (F85) bit 21 : Transmitter Power 5v (F86) bit 22 : LIT Pump Error (F87) bit 23~31 : for future expansion

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40029	Relay Status	R	u16	2	The meaning of bit : Value 0 is De-energized Value 1 is Energized	bit 0 : Internal Relay 1 energized bit 1 : Internal Relay 2 energized bit 2 : Internal Relay 3 energized bit 3 : for future expansion bit 4 : External Relay Fitted bit 5 : External Relay 1 energized (Ch1 alarm1) bit 6 : External Relay 2 energized (Ch1 alarm2) bit 7 : External Relay 3 energized (Ch2 alarm1) bit 8 : External Relay 4 energized (Ch2 alarm2) bit 9 : External Relay 5 energized (Any fault) bit 10 : External Relay 6 energized (Ch3 alarm1) bit 11 : External Relay 7 energized (Ch3 alarm2) bit 12 : External Relay 8 energized (Ch4 alarm1) bit 13 : External Relay 9 energized (Ch4 alarm2) bit 14~15 : for future expansion
40030	Temperature in Celsius (oC)	R	s16	2	Temperature	
40031	Flow rate in cc/minute	R	u16	2	Current pump flow	
40032 ~ 40037	Reserved for future expansion	R	u16	12		
<b>Channel 1 Information</b>						
40038	Gas Selection	R	u16	2		bit 0 - 7 : Gas ID bit 8 - 15 : Cell ID
40039 to 40040	Alarm1 threshold	R/W	f32	4		
40041 to 40042	Alarm2 threshold	R/W	f32	4		
40043	Measuring units	R	u16	2	Concentration units	0 : N/A 1 : mA 2 : %LEL 3 : % volume 4 : ppb 5 : ppm 6 : mg/m3 7 ~ 15: reserved



ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40044	Alarm Status	R	u16	2		bit 0 : Alarm 1 active bit 1 : Alarm 2 active
40045	Fault Status	R	u16	2	This is the bit order representation of the channel fault status. If any fault exists this will take a value in each bit.	bit 0 : Baseline Warning (m10) bit 1 : Overrange Warning (m11) bit 2 : Calibration Expire Soon (m20) bit 3 : Cell Expire Soon (m21) bit 4 : Temperature Warning (m40) bit 5 : Baseline Fault (F10) bit 6 : Calibration Expired (F20) bit 7 : Cell Expired (F21) bit 8 : Temperature Exceeded (F40) bit 9 : Cell Failure Refelex (F50) bit 10 : Cell Failure IR Comm. (F51) bit 11 : Cell EEPROM Read Error (F52) bit 12 : Cell EEPROM Corrupted (F53) bit 13 : Cell Failure IR Volt. (F54) bit 14~15 : : for future expansion
40046	Cell life remaining days	R	s16	2	Days of cell remains	
40047 ~ 40049	Reserved for future expansion	R		6		
<b>Channel 2 Information</b>						
40050	Gas Selection	R	u16	2		bit 0 - 7 : Gas ID bit 8 - 15 : Cell ID
40051 to 40052	Alarm1 threshold	R/W	f32	4		
40053 to 40054	Alarm2 threshold	R/W	f32	4		
40055	Measuring units	R	u16	2	Concentration units	0 : N/A 1 : mA 2 : %LEL 3 : % volume 4 : ppb 5 : ppm 6 : mg/m3 7 ~ 15: reserved

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40056	Alarm Status	R	u16	2		bit 0 : Alarm 1 active bit 1 : Alarm 2 active
40057	Fault Status	R	u16	2	This is the bit order representation of the channel fault status. If any fault exists this will take a value in each bit.	bit 0 : Baseline Warning (m10) bit 1 : Overrange Warning (m11) bit 2 : Calibration Expire Soon (m20) bit 3 : Cell Expire Soon (m21) bit 4 : Temperature Warning (m40) bit 5 : Baseline Fault (F10) bit 6 : Calibration Expired (F20) bit 7 : Cell Expired (F21) bit 8 : Temperature Exceeded (F40) bit 9 : Cell Failure Refelex (F50) bit 10 : Cell Failure IR Comm. (F51) bit 11 : Cell EEPROM Read Error (F52) bit 12 : Cell EEPROM Corrupted (F53) bit 13 : Cell Failure IR Volt. (F54) bit 14~15 : : for future expansion
40058	Cell life remaining days	R	s16	2	Days of cell remains	
40059 ~ 40061	Reserved for future expansion	R		6		
<b>Channel 3 Information</b>						
40062	Gas Selection	R	u16	2		bit 0 - 7 : Gas ID bit 8 - 15 : Cell ID
40063 to 40064	Alarm1 threshold	R/W	f32	4		
40065 to 40066	Alarm2 threshold	R/W	f32	4		
40067	Measuring units	R	u16	2	Concentration units	0 : N/A 1 : mA 2 : %LEL 3 : % volume 4 : ppb 5 : ppm 6 : mg/m3 7 ~ 15: reserved

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40068	Alarm Status	R	u16	2		bit 0 : Alarm 1 active bit 1 : Alarm 2 active
40069	Fault Status	R	u16	2	This is the bit order representation of the channel fault status. If any fault exists this will take a value in each bit.	bit 0 : Baseline Warning (m10) bit 1 : Overrange Warning (m11) bit 2 : Calibration Expire Soon (m20) bit 3 : Cell Expire Soon (m21) bit 4 : Temperature Warning (m40) bit 5 : Baseline Fault (F10) bit 6 : Calibration Expired (F20) bit 7 : Cell Expired (F21) bit 8 : Temperature Exceeded (F40) bit 9 : Cell Failure Refelex (F50) bit 10 : Cell Failure IR Comm. (F51) bit 11 : Cell EEPROM Read Error (F52) bit 12 : Cell EEPROM Corrupted (F53) bit 13 : Cell Failure IR Volt. (F54) bit 14~15 : : for future expansion
40070	Cell life remaining days	R	s16	2	Days of cell remains	
40071 ~ 40073	Reserved for future expansion	R		6		
<b>Channel 4 Information</b>						
40074	Gas Selection	R	u16	2		bit 0 - 7 : Gas ID bit 8 - 15 : Cell ID
40075 to 40076	Alarm1 threshold	R/W	f32	4		
40077 to 40078	Alarm2 threshold	R/W	f32	4		
40079	Measuring units	R	u16	2	Concentration units	0 : N/A 1 : mA 2 : %LEL 3 : % volume 4 : ppb 5 : ppm 6 : mg/m3 7 ~ 15: reserved

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40080	Alarm Status	R	u16	2		bit 0 : Alarm 1 active bit 1 : Alarm 2 active
40081	Fault Status	R	u16	2	This is the bit order representation of the channel fault status. If any fault exists this will take a value in each bit.	bit 0 : Baseline Warning (m10) bit 1 : Overrange Warning (m11) bit 2 : Calibration Expire Soon (m20) bit 3 : Cell Expire Soon (m21) bit 4 : Temperature Warning (m40) bit 5 : Baseline Fault (F10) bit 6 : Calibration Expired (F20) bit 7 : Cell Expired (F21) bit 8 : Temperature Exceeded (F40) bit 9 : Cell Failure Refelex (F50) bit 10 : Cell Failure IR Comm. (F51) bit 11 : Cell EEPROM Read Error (F52) bit 12 : Cell EEPROM Corrupted (F53) bit 13 : Cell Failure IR Volt. (F54) bit 14~15 : : for future expansion
40082	Cell life remaining days	R	s16	2	Days of cell remains	
40083 ~ 40085	Reserved for future expansion	R		6		
<b>Device Information</b>						
40086 to 40095	Transmitter serial number	R	char [20]	20		ASCII code format
40096 to 40105	Cartridge serial number	R	char [20]	20		ASCII code format
40106	Time Value in Year	R/W	u16	2		
40107	Time Value in Month, Date	R/W	u16	2		bit 0 - 7 : Date bit 8 - 15 : Month
40108	Time Value in Hour, Minute	R/W	u16	2		bit 0 - 7 : Minute bit 8 - 15 : Hour
40109	Time Value in Seconds	R/W	u16	2		
40110	Firmware Version (Transmitter)	R	u16	2		bit 0 - 7 : Minor bit 8 - 15 : Major

ModBus Register Number	Information	R/W	Data Type	Data Size (Byte)	Description	Note
40111	Firmware Version (Cartridge)	R	u16	2		bit 0 - 7 : Minor bit 8 - 15 : Major
40112 ~ 40121	Reserved for future expansion			20		
<b>Write Command (Write command1 and command2 to execute)</b>						
40122	Write Command 1	W	u16	2		0x015e : Reset Alarm & Fault 0x025e : Enter Inhibit (default 30min) 0x035e : Exit Inhibit
40123	Write Command 2	W	u16	2		Fixed value as 0x3626

## Cell ID & Gas ID

Cell ID		Gas ID	
0	N/A	0	N/A
1	H2	1	H2
2	SiH4	2	SiH4
3	Cl2	3	Cl2
4	NH3 Low	4	NH3
5	NH3 High	5	HBr
6	HBr	6	HCl
7	HCl	7	CO
8	CO	8	PH3
9	PH3	9	BCl3
10	BCl3	10	HF
11	HF High	11	TEOS
12	TEOS	12	B2H6
13	B2H6	13	ClF3
14	ClF3	14	BF3
15	BF3	15	WF6
16	WF6	16	O3
17	O3	17	GeH4
18	GeH4	18	CH4

Cell ID			Gas ID	
19	CH4		19	AsH3
20	AsH3		20	F2
21	F2		21	SiF4
22	SiF4		22	O2
23	O2		23	Si2H6
24	Si2H6		24	SO2
25	SO2		25	CO2
26	CO2		26	SiH2Cl2
27	SiH2Cl2		27	NO
28	NO		28	N2O
29	N2O		29	NO2
30	NO2		30	Br2
31	Br2		31	H2S
32	H2S High		32	POCl3
33	H2S Low		33	3MS
34	POCl3		34	N2H4
35	3MS		35	TMB
36	N2H4		36	TMP
37	TMB		37	ETO
38	TMP		38	C3H8
39	ETO		39	ClO2
40	C3H8		40	HCN
41	ClO2		41	SF4
42	HCN		42	CH3COOH
43	SF4		43	COCl2
44	CH3COOH		44	HMDS
45	COCl2		45	H2Se
46	HMDS			
47	H2Se			
48	HF Low			
1234	Dummy Cell			

## Fault Code

Fault Code ID	Description
00	No Fault
01	M02 - Simulated M fault
02	M10 - Baseline Warning
03	M11 - Over Range
04	M20 - Calibration Expired
05	M21 - Cell Expires Soon
06	M40 - Temperature Near Limit
07	M41 - Flow Low
08	F01 - LED indicator error
09	F02 - Simulated F Fault
10	F10 - Baseline Fault
11	F20 - Calibration Expired too long
12	F21 - Cell Expired
13	F40 - Temperature Limits Exceeded
14	F41 - Flow Fail
15	F42 - Pump Memory error
16	F43 - Pump absent
17	M44 – LIT fail
18	F50 - Cell Failure
19	F51 - Cell comm. Failure
20	F52 - Cell memory error
21	F53 - Cell Memory Invalid
22	F54 - Cell IR voltage error
23	F60 - The cartridge absent
24	F61 - Cartridge wrong type
25	F62 - No valid cell
26	F63 - Cartridge Memory Invalid
27	F64 - Cartridge app Memory Invalid
28	F65 - Cartridge 3.3V error
29	F66 - Cartridge 5V error
30	F67 - Cartridge app failed
31	F80 - Transmitter NOR flash error
32	F81 - Transmitter memory invalid

<b>Fault Code ID</b>	<b>Description</b>
33	F82 - Transmitter memory comm. Error
34	F83 - Transmitter app memory invalid
35	F84 - Transmitter 3.3V error
36	F85 - Transmitter 24V error
37	F86 - Transmitter 5V error
38	F87 – LIT Pump error




# Security

Midas-M is shipped from the factory with security disabled. It is recommended to enable the security function for safe use of the device. The security function can only be enabled through the **Set up > Security** menu of the local UI and requires at least 8 of passwords. If the security function is enabled, the web server can be accessed through HTTPS. And it is recommended to clear the browser cache to access the web server through HTTP after security is disabled.


## Modbus TCP

The MODBUS protocol does not have any authentication and integrity checking function. So the bump-in-the wire solution is recommended using a network equipment with SSL VPN Firewall function to protect the Midas-M from external attacks.

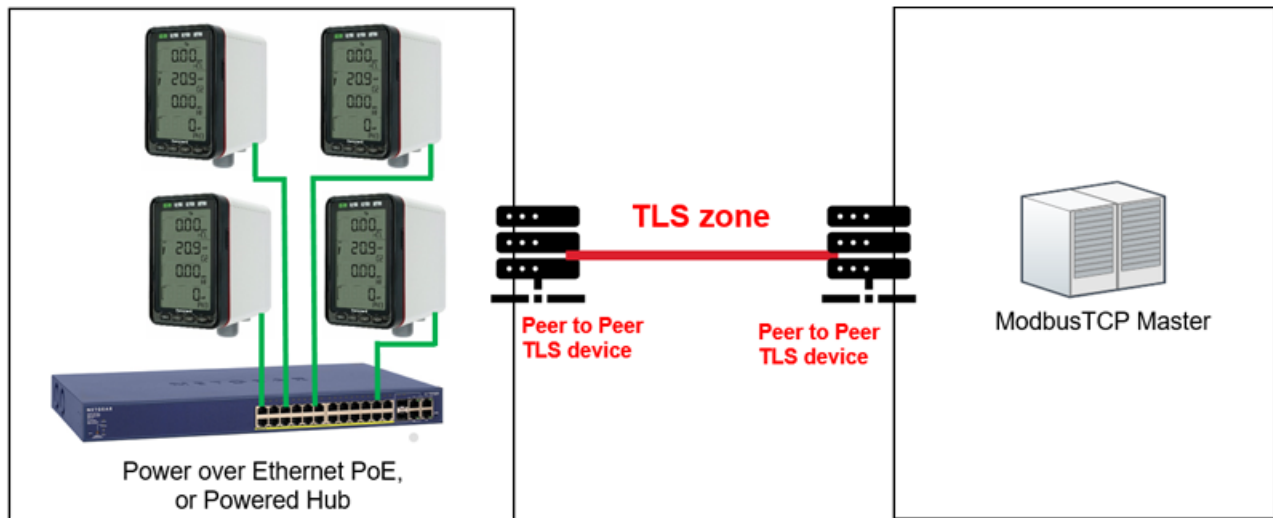

## DOS attack


The web application may not work due to DoS attacks. The Midas device is even needed to restart for the web application to work properly. So the bump-in-the wire solution is recommended using a network firewall hardware solution that can detect and block DoS attacks.

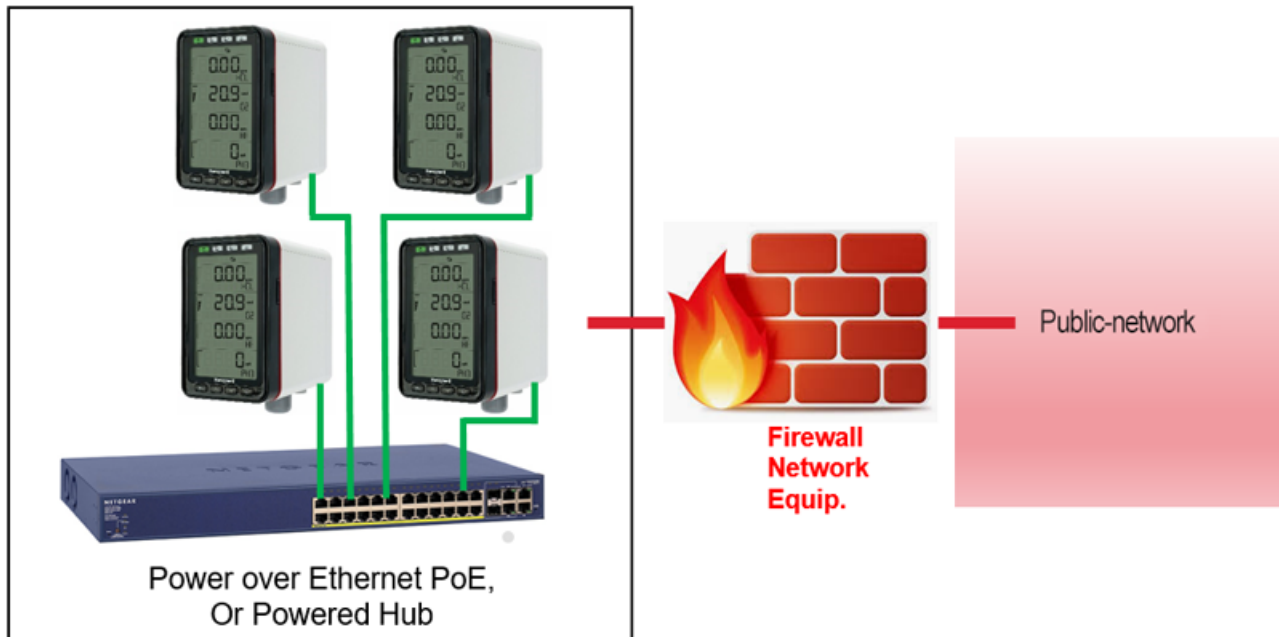




# Install Web Server Certificate in Google Chrome

How to install a web sever certificate in a Chrome web browser, when the security function is enabled.

1. Open Chrome browser window and type `https://xxx.xxx.xxx.xxx` (device address) as the URL, and then press **ENTER** to connect to the device. A "Connection to this site is not secure" message is displayed.
2. Click **Certificate** to download the certificate and follow onscreen instructions.

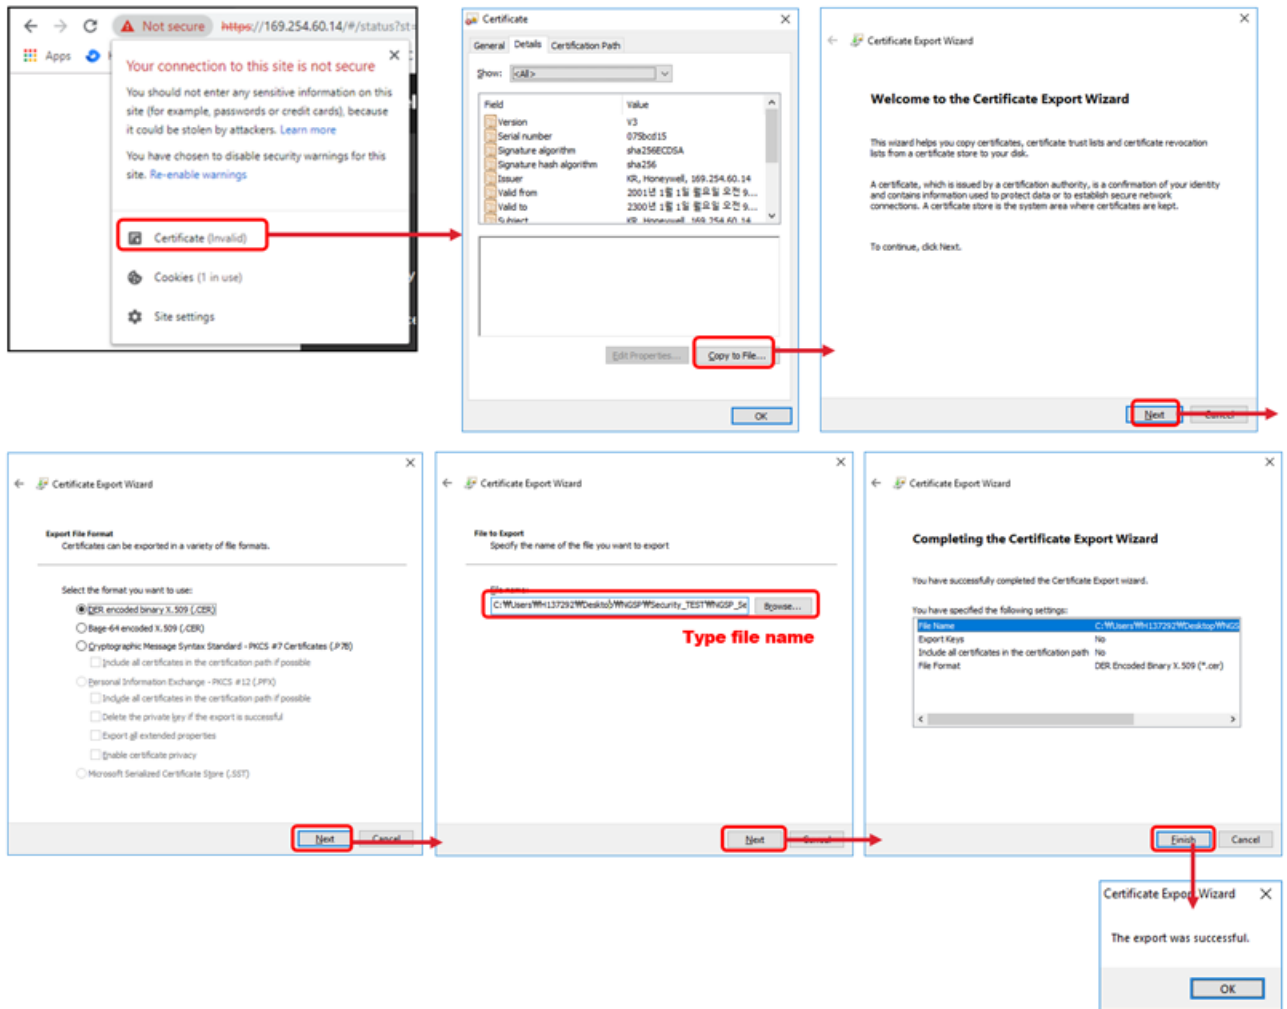

3. On the Chrome main page, click the three dots (Advanced) button and select **Settings > Manage certificates** and then follow onscreen instructions as follows to set the certificate.

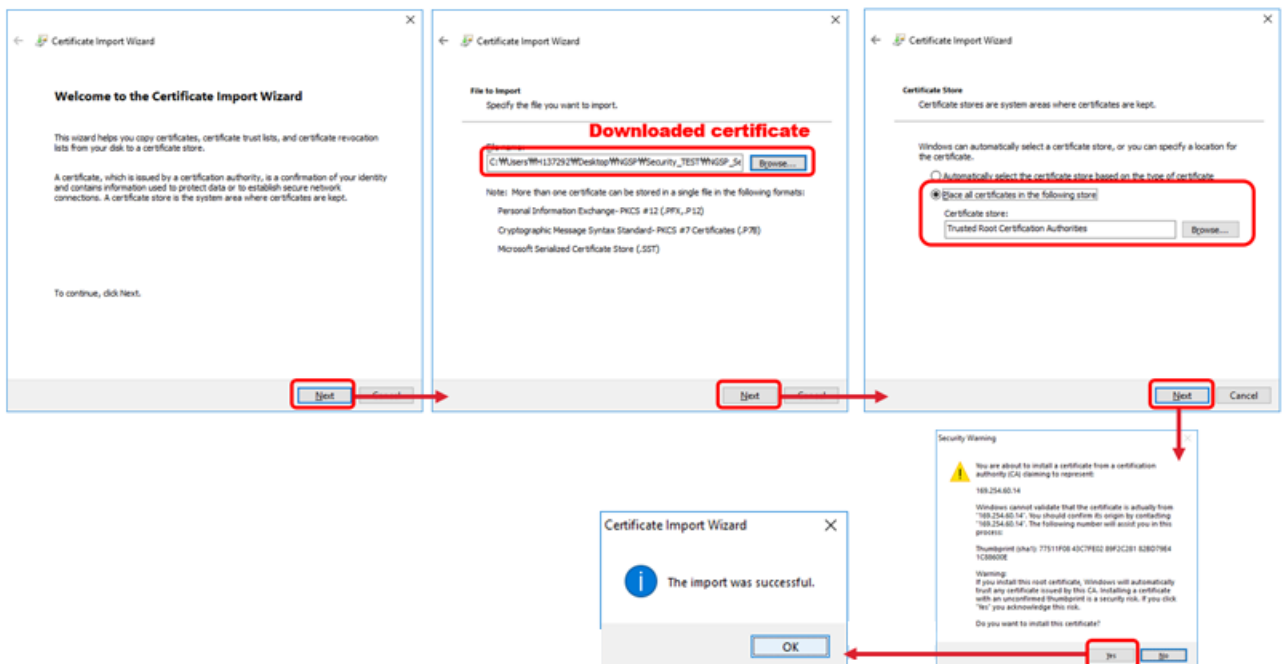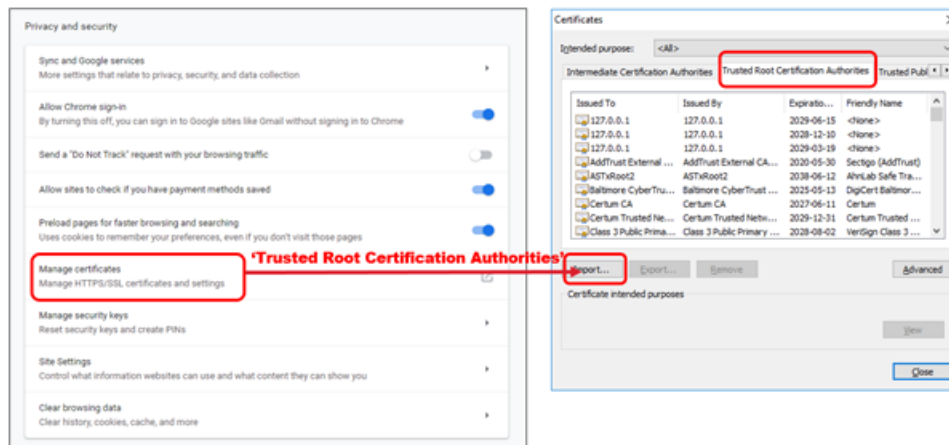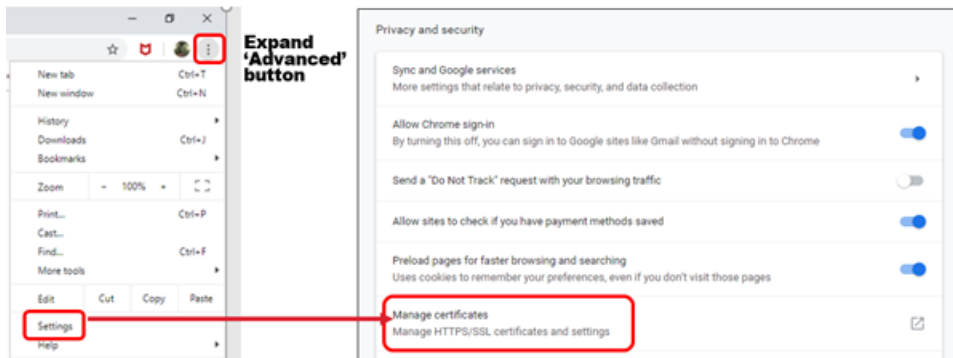


- Close and re-open the Chrome Web browser, and then access to your device's address <https://xxx.xxx.xxx.xxx> . A "Connection is secure" message is displayed. The certificate should be reinstalled when the IP address is changed


# Install Web Server Certificate in MS Browsers

How to install a web sever certificate in Microsoft Internet Explorer and Edger, when the security function is enabled.


1. Open browser window and access <https://xxx.xxx.xxx.xxx> (device address) in your browser. Click “Certificate error” text. The Certificate Information window is displayed.




2. Click **Export to File** and then save the certificate in your PC or device.
3. On your computer locate and run Certificate Manager **certmgr.msc**

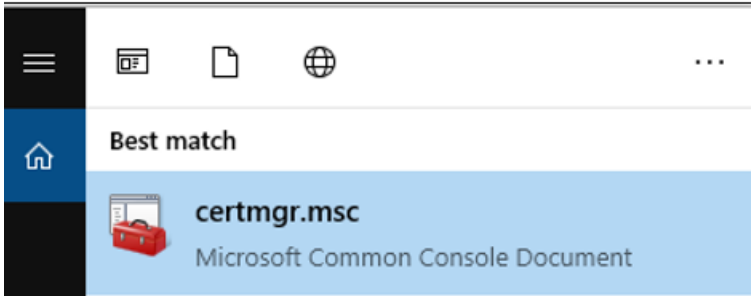

4. On the Certificate Manager window, expand **Trusted Root Certification Authorities** and right click on **Certificates**. Select **All tasks > Import...**

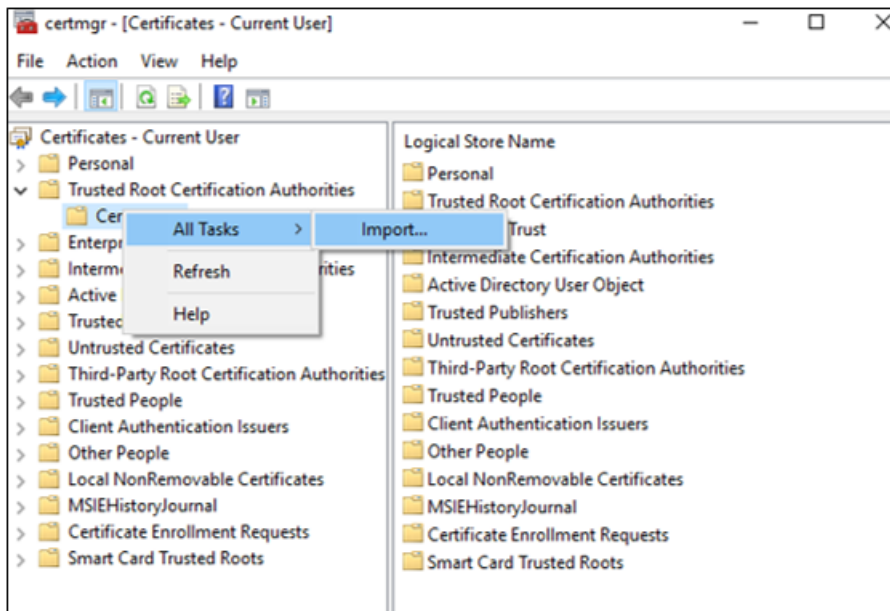

5. Follow the Certificate Import Wizard onscreen instructions.

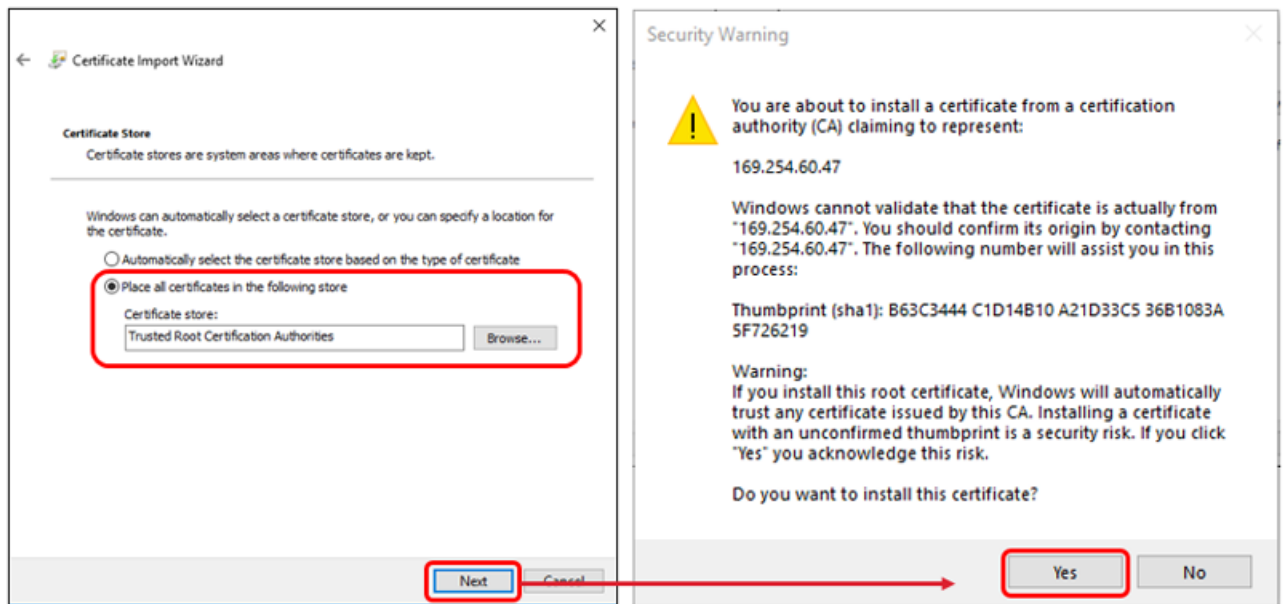

The certificate should be reinstalled when the IP address is changed

# Warranty

All products are designed and manufactured to the latest internationally recognized standards by Honeywell Analytics under a Quality Management System that is certified to ISO 9001.

As such, the Midas-M Transmitter (including the pump) is warranted under proper use, to the original end- user purchaser, against any defects in materials or workmanship related failures for a **period of 24 months** from the date of first turn-on or 30 months from delivery from Honeywell Analytics to the customer, whichever is less. Separate warranty conditions apply to the sensor cartridges limited as indicated below. During this period, Honeywell Analytics will repair or replace defective parts on an exchange basis, F.O.B. to approved service centers on a global basis.

This warranty does not cover damage caused by accident, abuse, abnormal operating conditions or extreme poisoning of the sensor cartridge.

Defective equipment must be returned to Honeywell Analytics for repair. Before returning materials for repair or replacement, the Customer must obtain a Service Event Number (SE#) by contacting Honeywell Analytics Service in advance; include a detailed report stating the nature of the defect and ship the equipment prepaid to Honeywell Analytics' factory. If no detail report is included, Honeywell Analytics reserves the right to charge an investigative fee (prices available upon request) before any repair or replacement is performed. Returned goods must detail the Service Event Number (SE#) clearly on the package.

Service in the field or at the customer's premises is not covered under these warranty terms. Time and travel expenses for on-site warranty services will be charged at Honeywell Analytics' normal billing rates.

Contact your Honeywell Analytics representative for information on available Service Contracts.

Honeywell Analytics shall not be liable for any loss or damage whatsoever or howsoever occasioned which may be a direct or indirect result of the use or operation of the Contract Goods by the Buyer or any Party.

This warranty covers the gas detector and parts sold to the Buyer only by authorized distributors, dealers and representatives as appointed by Honeywell Analytics. This warranty does not cover defects attributable to improper installation, repair by an unauthorized person or the use of unauthorized accessories/parts on the product. A warranty claim will only be accepted if a proof of purchase is submitted and all conditions obtained within this Warranty are met.

Honeywell Analytics reserves the right to validate any warranty claim prior to processing. Upon acceptance of a warranty claim, Honeywell Analytics will repair or replace the defective product free of charge. The initial warranty period is not extended by virtue of any works carried out there after.

Instruments which have been repaired or replaced during the warranty period are warranted for the remainder of the unexpired portion of the original warranty period.

Honeywell Analytics is released from all obligations under its warranty in the event repairs or modifications are made by persons other than its own authorized personnel, unless such work is

authorized in writing by Honeywell Analytics. The initial warranty period is not extended by virtue of any works carried out there under.

Honeywell Analytics reserves the right to change this policy at any time. Contact Honeywell Analytics for the most current warranty information.

## Sensor Cartridge Warranty

Midas-M sensor cartridges with part numbers beginning in MIDAS-E carry a **24 month warranty** from switch-on/installation or up to 30 months from the date of shipment from Honeywell Analytics, whichever is less, provided this takes place before the “Activate Before” date on the cartridge. Pro-rata after “Activate Before”/ install by date.

- The oxygen sensor cartridge is guaranteed to operate satisfactorily for the period described above and will be replaced at no charge within that period only if it will not provide a correct reading after calibration by Authorized Service personnel. Physical or chemical damage, resulting from exposure to improper elements, is not covered.
- The toxic sensor cartridges are guaranteed to operate satisfactorily for the period described above. They will be replaced at no charge within that period only if they will not provide a correct reading after calibration by Authorized Service personnel, and only if the sensor cartridge membranes exhibit no physical or chemical damage resulting from exposure to improper substances.

Note that the Midas-M sensor cartridge stores an electronic history of each individual sensor cartridge’s manufacture, warranty and calibration activity that is accessible by Authorized Service personnel.



# Contact Us

## **Americas**

Honeywell Analytics

405 Barclay Boulevard

Lincolnshire, IL 60069

Tel: +1 847 955 8200

Toll free: +1 800 538 0363

Fax: +1 847 955 8208

detectgas@honeywell.com

## **Europe, Middle East, and Africa**

Life Safety Distribution AG(LSD)

Javastrasse 2

8604 Hegnau

Switzerland

Tel: +41 (0) 44 943 4300

Fax: +41 (0) 44 943 4398

gasdetection@honeywell.com

## **Asia Pacific, India.**

Honeywell Analytics Asia Pacific, Co., Ltd.

7F SangAm IT Tower,

434 Worldcup Buk-ro, Mapo-gu,

Seoul 03922, South Korea

Tel: +82 (0) 2 6909 0300

Fax: +82 (0) 2 2025 0388

India Tel: +91 124 4752 700

Analytics.ap@honeywell.com

## **Mainland China**


Honeywell Industrial Safety Gas Detectors

Building#1, 555 Huanke Road Zhang Jiang

Hi-Tech Park Pudong New Area Shanghai  
201203, China  
Tel: 021-80386800  
Fax: 021-60246070  
[gaschina@honeywell.com](mailto:gaschina@honeywell.com)

**Taiwan**

Honeywell Taiwan Ltd  
6F-2, No.8, ZiQiang S. Road, Jubei City,  
30264 Taiwan  
Tel: +886-3-5169284  
Fax: +886-3-5169339  
[analytics.tw@honeywell.com](mailto:analytics.tw@honeywell.com)

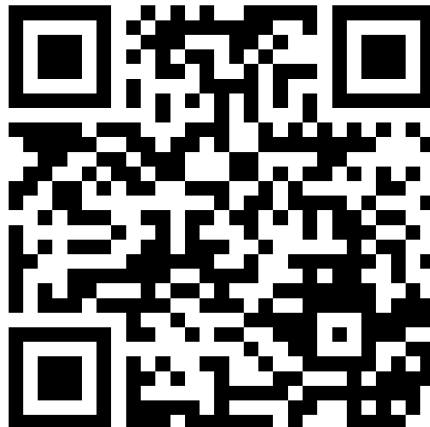

**Honeywell**

© 2021, June 14.